

E2C/E2C-H

Separate Amplifier Sensor with Sensitivity Adjustment

- Compact design with smaller Sensor Head.
- Heat-resistance model available for application between -10 and 200°C.



Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information

Be sure to read *Safety Precautions* on page 878.

Ordering Information

Sensors

Standard Models

Sensor				Combination	Amplifier Units			
Appearance	Stable sensing area *1	Model	Model		Power supply/Output	Timer function	Self-diagnostic output	
Unshielded *2	2 dia. 0.5 (1.2) mm	E2C-CR5B		E2C-GE4B	DC/(NPN)	---	---	
	3.5 dia. 0.8 (1.8) mm	E2C-CR8A		E2C-GF4B	DC/(PNP)	---	---	
	3.8 dia. 0.8 (1.8) mm	E2C-CR8B		E2C-GE4A	DC/(NPN)	---	---	
	M5 1 (2) mm	E2C-X1A		E2C-GF4A	DC/(PNP)	---	---	
	5.4 dia. 1 (2) mm	E2C-C1A		E2C-WH4A	DC/(NPN) (PNP)	---	---	
	M8 1.5 (3) mm	E2C-X1R5A		E2C-JC4AP *	DC/(NPN)	Yes	Yes	
	M12 2 (5) mm	E2C-X2A		E2C-JC4A	DC/(NPN)	Yes	---	
	M18 5 (10) mm	E2C-X5A		E2C-AM4A	DC/(NPN) (PNP)	---	---	
	M30 10 (18) mm	E2C-X10A		E2C-AK4A	AC	---	---	
Unshielded	40 dia. 20 (50) mm	E2C-C20MA						

*1. Values in parentheses are for the maximum sensing distances at 23°C.
 *2. Although the E2C-CR5B has a shielded structure, it cannot be embedded in metal.

* Self-diagnostic output, timer, and DIN Track mounting.

Heat-resistant Model

Sensor			Combination	Amplifier Unit
Appearance	Stable sensing area	Model		Model
	M8 1.5 mm	E2C-X1R5AH	■ →	E2C-JC4CH
	M12 2 mm	E2C-X2AH	■ →	E2C-JC4DH
	M18 5 mm	E2C-X5AH	■ →	E2C-JC4EH

Note: Characteristics will change if the cable length changes. Do not cut or extend the cable.

Accessories (Order Separately)

Mounting Brackets

Name	Model	Applicable Sensors	Remarks
Mounting Brackets	Y92E-F3R5	E2C-CR8A, for 3.5 dia.	---
	Y92E-F5R4	E2C-C1A, for 5.4 dia.	

Connection Sockets

Name	Model	Applicable Amplifier Unit	Remarks	
Front Connection Sockets	PYF08A	E2C-GE4A E2C-GE4B E2C-GF4A E2C-GF4B	Hold-down Clips (Order Separately) PYC-A1 Sold as a set.	
		P2CF-08		E2C-AM4A
		P2CF-11		E2C-AK4A
Back Connection Sockets	P3G-08	E2C-AM4A	---	
	P3GA-11	E2C-AK4A		

Adapters

Name	Model	Applicable Amplifier Unit	Remarks
Embedded Adapters	Y92F-30	E2C-AM4A/-AK4A	---
	Y92F-70		
	Y92F-71		

For details on [Mounting Brackets](#), [Protective Covers](#), and [Sputter Protective Covers](#), refer to [Accessories](#) on page 930.

Proximity
Sensors

Sensing
Guide

Cylindrical
Models

Rectangular
Models

Separate Amp/
Pre-wired
Connector
Models

Capacitive
Models

Others

Peripheral
Devices

General
Information

E2EC

E2C-EDA

E2C
/E2C-H

E2CY

E2C/E2C-H

Ratings and Specifications

Standard Models

Sensors

Model		E2C-CR5B	E2C-CR8A/ -CR8B	E2C-X1A/ -C1A	E2C-X1R5A	E2C-X2A	E2C-X5A	E2C-X10A	E2C-C20MA	
Sensing distance (at 23°C)		1.2 mm	1.8 mm	2 mm	3 mm	5 mm	10 mm	18 mm	50 mm	
Stable sensing area	Ambient temperature	0 to 0.5 mm	0 to 0.8 mm	0 to 1 mm	0 to 1.5 mm	0 to 2 mm	0 to 5 mm	0 to 10 mm	0 to 20 mm	
	At 0 to 40°C	0 to 0.7 mm	0 to 1.2 mm	0 to 1.5 mm	0 to 2 mm	0 to 2.5 mm	0 to 7 mm	0 to 15 mm	0 to 28 mm	
Differential travel		Refer to <i>Ratings and Specifications</i> on page 867 for Amplifier Unit specifications.								
Sensing object		Ferrous metal (The sensing distance decreases with non-ferrous metal. Refer to <i>Engineering Data</i> on page 870.)								
Standard sensing object		Iron, 5 × 5 × 1 mm			Iron, 8 × 8 × 1 mm	Iron, 12 × 12 × 1 mm	Iron, 18 × 18 × 1 mm	Iron, 30 × 30 × 1 mm	Iron, 50 × 50 × 1 mm	
Response frequency *1		1 kHz			800 Hz		350 Hz	100 Hz	50 Hz	
Ambient temperature		Operating: -10 to 55°C	Operating/Storage: -25 to 70°C (with no icing or condensation)							
Ambient humidity		Operating/Storage: 35% to 95% (with no condensation)								
Temperature influence		±25% max. of sensing distance at 23°C in the temperature range of -10 to 55°C	15% max. of sensing distance at 23°C in the temperature range of -25 to 70°C							
Vibration resistance		Destruction: 10 to 55 Hz, 1.5-mm double amplitude for 2 hours each in X and Y directions								
Shock resistance		Destruction: 500 m/s ² 3 times each in X and Y directions								
Degree of protection		IEC 60529 IP64	IEC 60529 IP67							
Connection method *2		Pre-wired Models								
		Shielded cable (Cable length: 3 m)	High-frequency coaxial cable (Standard cable length: 3 m)							
Weight (packed state)		Approx. 10 g	Approx. 40 g	Approx. 45 g	Approx. 50 g	Approx. 60 g	Approx. 140 g	Approx. 270 g	Approx. 300 g	
Materials	Case	Stainless steel		Brass						
	Sensing surface	ABS resin								
	Cable	Polyethylene								
	Clamping nut	---			Brass, nickel-plated (except E2C-C1A)					
	Toothed washer	---			Brass, zinc-plated (except E2C-C1A)					
Accessories		---								

*1. The minimum value when using the solid-state control output on the Amplifier Unit.

Measurement conditions are as follows: standard sensing object, a distance of twice the standard sensing object, and a set distance of half the sensing distance.

*2. Refer to 869 for cable lengths when combining Amplifier Units and Sensors.

The characteristic impedance of the high-frequency coaxial cable is 50 Ω.

E2EC

E2C-EDA

E2C
/E2C-H

E2CY

Amplifier Units

Model		E2C-GE4□	E2C-GF4□	E2C-JC4A E2C-JC4AP	E2C-WH4A	E2C-AM4A	E2C-AK4A	
Power supply voltage (operating voltage range)		12 to 24 VDC (10 to 30 VDC), ripple (p-p): 10% max. *1					100 to 240 VAC (90 to 264 VAC) 50/60 Hz	
Current consumption		25 mA max.		45 mA max.	25 mA max.	50 mA max.	55 mA max.	
Sensing distance adjustment range *2		20% min. of rated sensing distance with 4-turn potentiometer		20% to 100% of rated sensing distance with 4-turn potentiometer				
Differential travel adjustment range		Differential travel fixed (10% max. of sensing distance)				1% to 5% of rated sensing distance *3		
Response time	Solid-state	(Refer to the response frequency of the Proximity Sensor.)						
	Relay	---						
Control outputs	Solid-state	NPN Load resistance: 4.7 kΩ, 100 mA max. (40 VDC max.) (Residual voltage: 1.5 V max.)	PNP Load resistance: 4.7 kΩ, 100 mA max. (40 VDC max.) (Residual voltage: 1.5 V max.)	NPN Open-collector output 100 mA max. (40 VDC max.) (Residual voltage: 0.7 V max.) (E2C-JC4AP: 1 V max.)	NPN/PNP output Open-collector output 200 mA max. (40 VDC max.) (Residual voltage: 1.5 V max.)		Transistor/photocoupler 50 mA max. (40 VDC max.) (Residual voltage: 2 V max.)	
	Relay	---						Relay output, SPDT 2 A at 250 VAC, cosφ = 1 (resistive load) *4
Indicators		Detection indicator (red)		Detection indicator (red) Stability indicator (green)	Detection indicator (red)	Detection indicator (red) Stability indicator (green)		
Operation mode		Changed with NO/NC switch.						
Self-diagnostic output		---		(E2C-JC4AP only) Output transistor turns ON when Sensor open circuit or unstable sensing is detected; solid-state NPN open-collector 50 mA max. (40 VDC max.) (Residual voltage: 1 V max.)	---		---	
Timer function		---		OFF-delay: 40 ±10 ms	---		---	
Cable length compensation between Sensor and Amplifier Unit		---		(E2C-JC4AP only) 3 m/5 m, terminals Short-plate switching Shorted: 1 to 3 m Open: 3 to 5 m	Switched between 3 and 5 m.	Mode switched with 4-position switch.		
Ambient temperature		Operating/storage: -10 to 55°C (with no icing or condensation)						
Ambient humidity		Operating/Storage: 35% to 85% (E2C-JC4AP: 35% to 95%) (with no condensation)						
Temperature influence		10% max. of sensing distance at 23°C in the temperature range of -10 to 55°C						
Voltage influence		DC Models: ±1% max. of sensing distance at rated voltage in the rated voltage ±20% range AC Models: ±1% max. of sensing distance at rated voltage in the rated voltage ±10% range						
Insulation resistance		50 MΩ min. (at 500 VDC) between current-carrying parts and case						
Dielectric strength		DC Models: 1,000 VAC, 50/60 Hz for 1 min between current-carrying parts and case AC Models: 1,500 VAC, 50/60 Hz for 1 min between current-carrying parts and case						
Vibration resistance		Destruction: 10 to 25 Hz, 2-mm double amplitude for 2 hours each in X, Y, and Z directions		Destruction: 10 to 55 Hz, 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions	Destruction: 10 to 25 Hz, 2-mm double amplitude for 2 hours each in X, Y, and Z directions			

Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information

E2EC

E2C-EDA

E2C/E2C-H

E2CY

E2C/E2C-H

Model	E2C-GE4□	E2C-GF4□	E2C-JC4A E2C-JC4AP	E2C-WH4A	E2C-AM4A	E2C-AK4A
Shock resistance	Destruction: 100 m/s ² 3 times each in X, Y, and Z directions					
Life expectancy	---					Mechanical: 10,000,000 operations min. Electrical: 100,000 operations min.
Connection method	Terminal block		Pre-wired Models (Standard cable length: 2 m)	Terminal block		
Weight (packed state) *5	Approx. 20 g		E2C-JC4A: Approx. 50 g E2C-JC4AP: Approx. 80 g	Approx. 80 g	Approx. 140 g	Approx. 250 g
Accessories	Instruction manual		Caution labels, Mounting Bracket, instruction manual	Instruction manual		

*1. A full-wave rectification power supply of 24 VDC ±10% (average value) can be used (except for the E2C-GE4□).

*2. The sensing distance range required to maintain performed is given for using the Amplifier Unit in combination with the Sensor.

*3. E2C-CR5B: 1% to 20% of rated sensing distance.

*4. Internal relay: G2R-114P-V-VS DC 12V

*5. The weight of the Connection Socket is not included.

Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information

Heat-resistant Models

Sensors

Item	Model	E2C-X1R5AH	E2C-X2AH	E2C-X5AH
Sensing object	Ferrous metal (The sensing distance decreases with non-ferrous metal, refer to <i>Engineering Data</i> on page 870.)			
Standard sensing object	Iron, 8 × 8 × 1 mm	Iron, 12 × 12 × 1 mm	Iron, 18 × 18 × 1 mm	
Stable sensing area	0 to 1.5 mm	0 to 2 mm	0 to 5 mm	
Differential travel	0.04 mm max.		0.1 mm max.	
Response frequency *1	300 Hz			
Ambient temperature	Operating/Storage: -10 to 200°C (with no icing or condensation)			
Ambient humidity	Operating/Storage: 35% to 95% (with no condensation)			
Temperature influence	±0.2%/°C			
Vibration resistance	Destruction: 10 to 55 Hz, 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions			
Shock resistance	Destruction: 500 m/s ² 3 times each in X, Y, and Z directions			
Degree of protection	IEC 60529 IP60 *2			
Connection method	Pre-wired Models (Cable length: 3 m) Heat-resistant, high-frequency coaxial cable			
Weight (packed state)	Approx. 50 g	Approx. 60 g	Approx. 140 g	
Materials	Case	Brass		
	Sensing surface	PEEK (polyether ether ketone)		
	Cable	Fluorine resin		
	Clamping nut	Brass, nickel-plated		
	Toothed washer	Iron, zinc-plated		

Note: Ratings and characteristic are given for 50% of the stable sensing area.

*1. Measurement conditions are as follows: standard sensing object, a distance of twice the standard sensing object, and a set distance of half the sensing distance.

*2. Do not operate the Sensor in areas exposed to water vapor because the enclosure is not waterproof.

Amplifier Units

Item	Model	E2C-JC4CH	E2C-JC4DH	E2C-JC4EH
Power supply voltage *1 (operating voltage range)	12 to 24 VDC (10 to 30 VDC), ripple (p-p): 10% max.			
Current consumption	45 mA max.			
Sensing distance adjustment range *2	20% to 100% of rated sensing distance 4-turn potentiometer			
Control outputs	Load current	NPN open collector, 100 mA max. (40 VDC max.)		
	Residual voltage	0.8 V max.		
Indicators	Detection indicator (red)			
Operation mode	Changed with NO/NC switch.			
Cable length compensation	Switched between 3 and 5 m.			
Ambient temperature	Operating/storage: -10 to 55°C (with no icing or condensation)			
Ambient humidity	Operating/storage: 35% to 85% (with no condensation)			
Temperature influence	±0.08%/°C			
Voltage influence	±2% max. of sensing distance at rated voltage in the rated voltage ±20% range			
Insulation resistance	50 MΩ min. (at 500 VDC) between current-carrying parts and case			
Dielectric strength	1,000 VAC, 50/60 Hz for 1 min between current-carrying parts and case			
Vibration resistance	Destruction: 10 to 55 Hz, 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions			
Shock resistance	Destruction: 100 m/s ² 3 times each in X, Y, and Z directions			
Degree of protection	IEC 60529 IP20			
Connection method	Pre-wired Models (Cable length: 2 m)			
Weight (packed state)	Approx. 80 g			
Accessories	Caution labels, Mounting Bracket, instruction manual			

*1. A full-wave rectification power supply of 24 VDC ±10% (average value) can be used.

*2. The sensing distance range required to maintain performed is given for using the Amplifier Unit in combination with the Sensor.

Cable Lengths for Sensor-Amplifier Unit Combinations

Standard Models

Sensor Amplifier Units	E2C-CR5B	E2C-CR8A	E2C-CR8B	E2C-X1A	E2C-C1A	E2C-X1R5A	E2C-X2A	E2C-X5A	E2C-X10A	E2C-C20MA	
E2C-GE4B	Restricted to 3 m.	---	---	---	---	---	---	---	---	---	
E2C-GF4B		---	---	---	---	---	---	---	---	---	
E2C-GE4A	---	Restricted to 3 m.					---	---	---	---	
E2C-GF4A	---	Restricted to 3 m.					---	---	---	---	
E2C-WH4A	---	Restricted to 3 m or 5 m. Set cable length switch to desired position.					---	---	---	---	
E2C-JC4AP	---	1 to 3 m: Short cable length terminals 3 to 5 m: Open cable length terminals					---	---	---	---	
E2C-JC4A	---	Restricted to 3 m.					---	---	---	---	
E2C-AM4A	Restricted to 3 m or 5 m. All pins set to left.	0 to 5 m Set cable length switch to desired position.					0 to 10 m Set cable length switch to desired position.				
E2C-AK4A											

Note: The standard cable length is 3 m. Models with 5-m or 10-m are manufactured upon order.

Heat-resistant Models

Sensor Amplifier Units	E2C-X1R5AH	E2C-X2AH	E2C-X5AH
E2C-JC4CH	Set 3 m/5 m cable length switch to desired position.		
E2C-JC4DH			
E2C-JC4EH			


Note: The standard cable length is 3 m. Models with 5-m are manufactured upon order.

Self-diagnostic Function


The self-diagnostic output transistor will turn ON in the following cases. (The output will turn ON for any of these conditions individually.)

(1) Sensor open circuit: Transistor will turn ON the instance there is an open circuit for the Sensor (including the cable).

Sensor Open Circuit

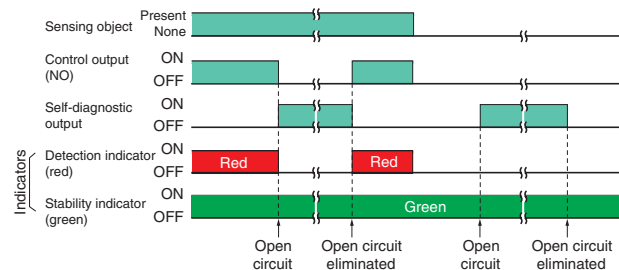

Sensor Connected

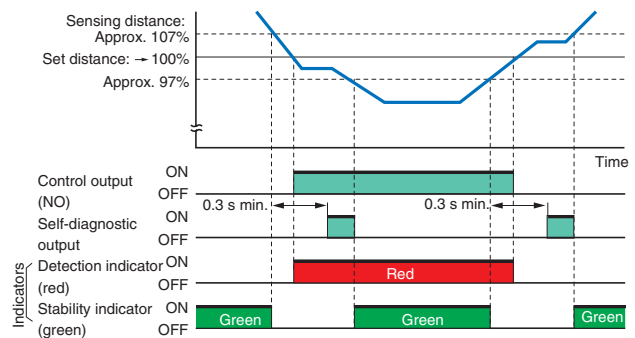


Note: When the E2C-X2A Sensor is used, 93% is 96% and 107% is 104%.
*The self-diagnostic output may turn ON if the sensing objects moves a low speed. In actual application, include an ON-delay timer circuit or other suitable measure.

- (2) Detection: The output will turn ON if a sensing object is within 93% to 100% of the sensing distance continuously for 0.3 s or longer (e.g., for sensing object position offset).
- (3) No detection: The output will turn ON if a sensing object is within 100% to 107% of the sensing distance continuously for 0.3 s or longer (e.g., when background is influencing detection).

Indicators

- The detection indicator lights when a sensing object approaches the sensing distance to indicate that a sensing object has been detected.
- The stability indicator lights when the sensing object approaches within 93% of the sensing distance or moves away from 107% of the sensing distance to indicate a stable sensing or non-sensing condition.

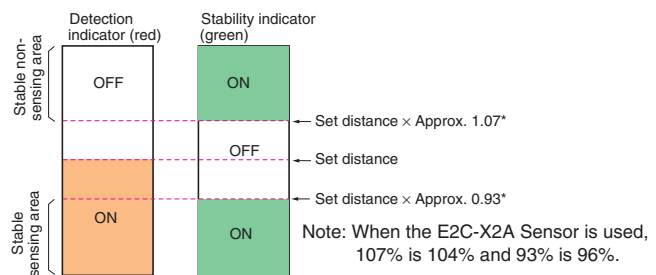

Note: When the E2C-X2A Sensor is used, 107% is 104% and 93% is 96%.

Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information

E2EC

E2C-EDA

E2C/E2C-H


E2CY

E2C/E2C-H


Engineering Data (Typical)

Sensing Area


E2C-CR5B

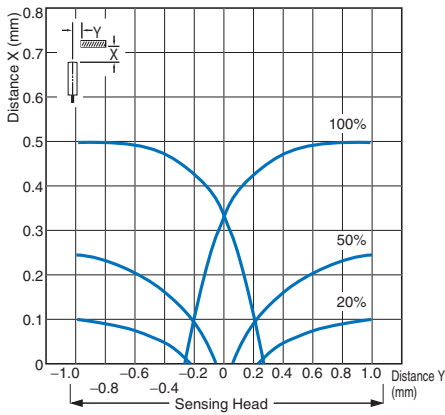


E2C-CR8

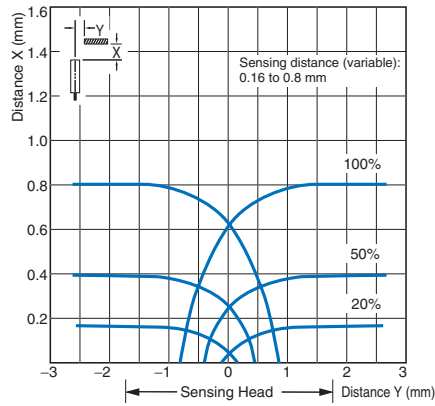


E2C-X1A/C1A

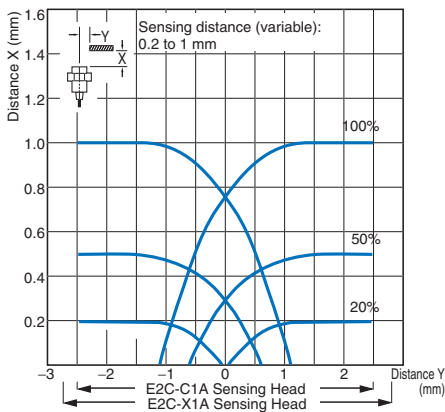


E2C-X1R5A

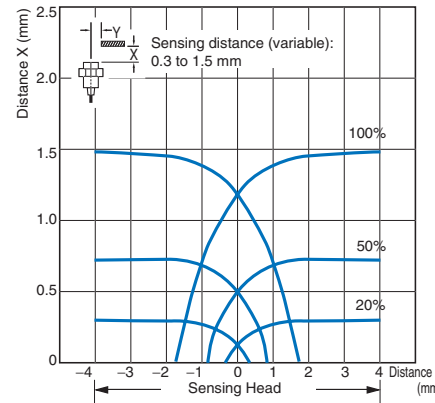


E2C-X2A

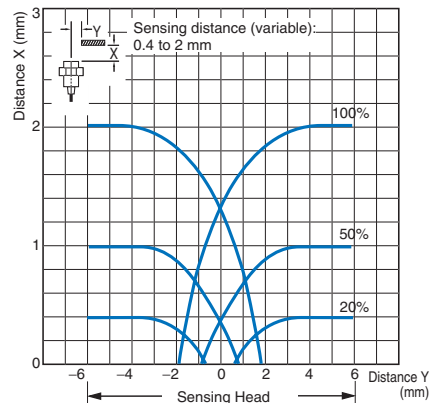


E2C-X5A

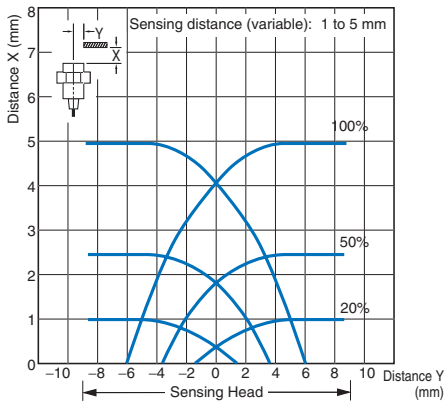


E2C-X10A

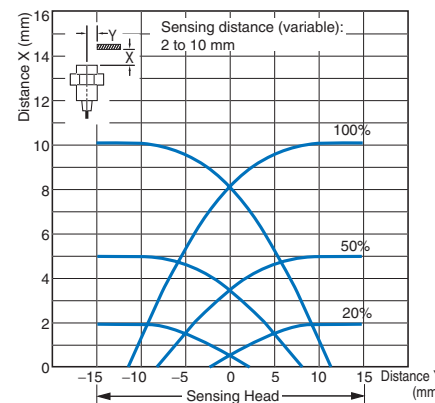


E2C-C20MA

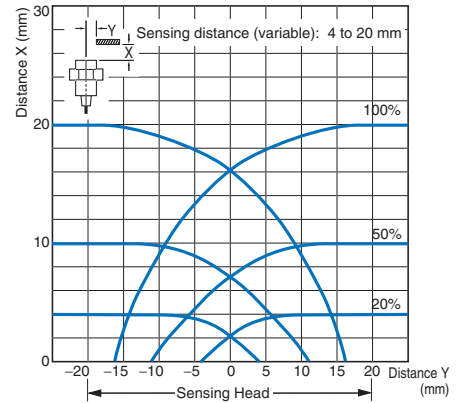


E2C-X1R5AH + E2C-JC4CH

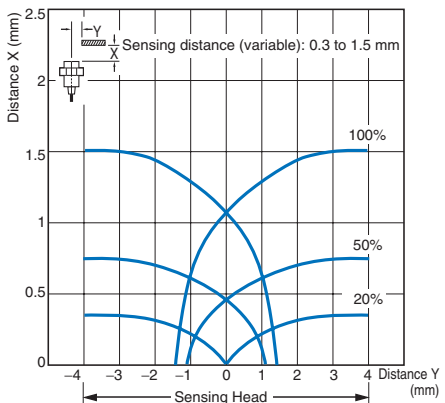

E2C-X2AH + E2C-JC4DH

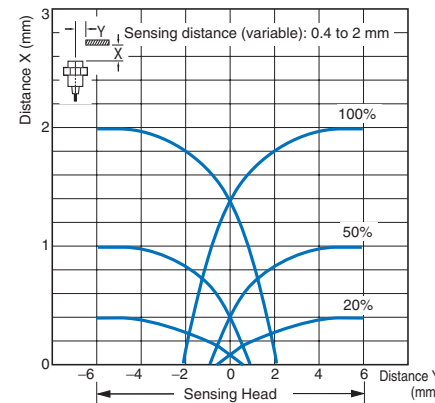

E2C-X5AH + E2C-JC4EH

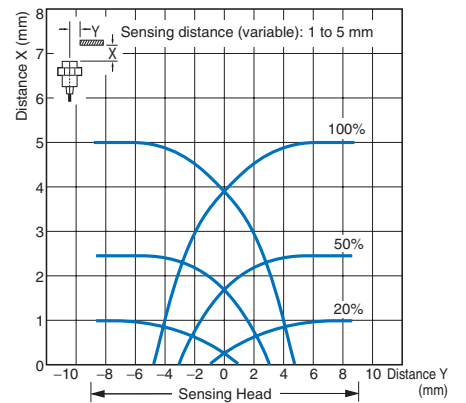

Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information












E2EC

E2C-EDA

E2C/E2C-H

E2CY

Influence of Sensing Object Size and Material

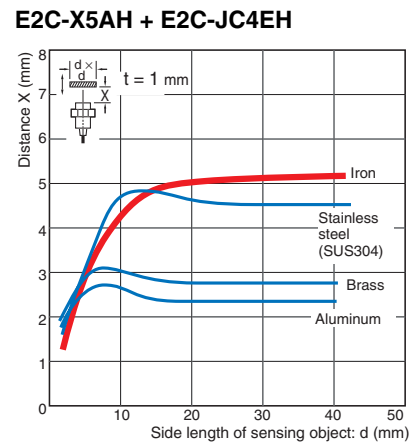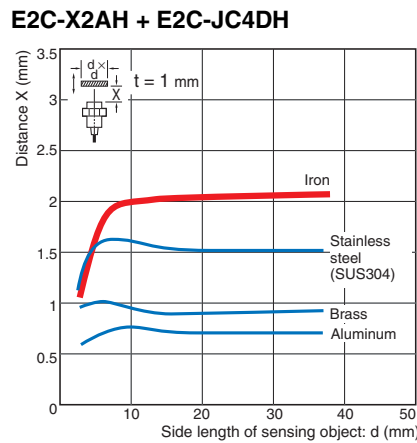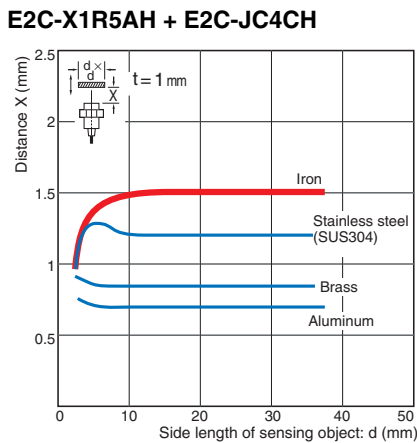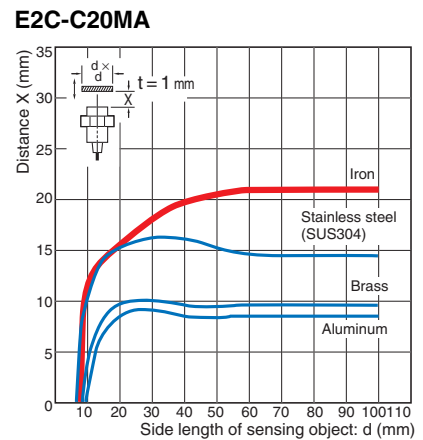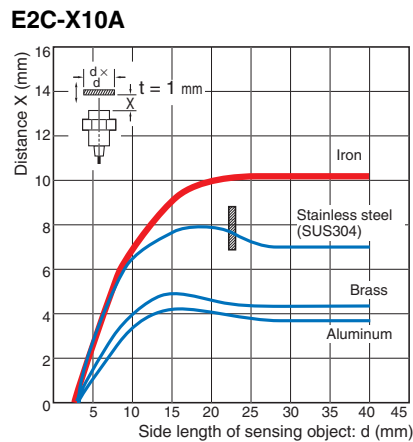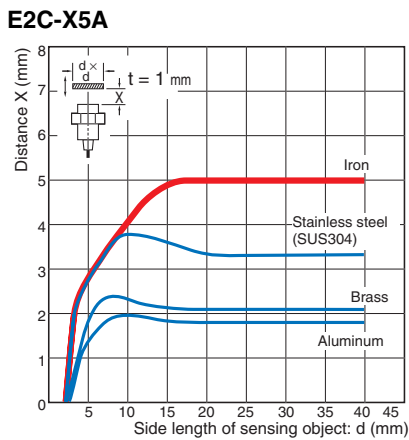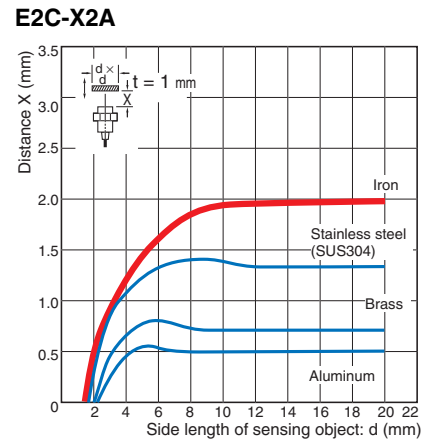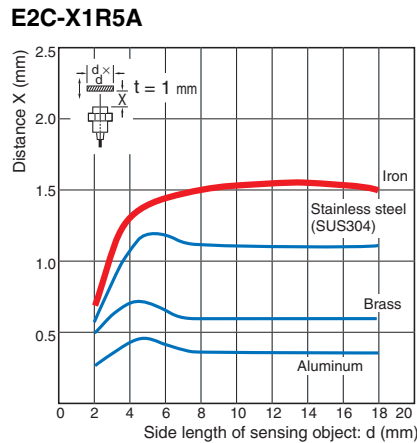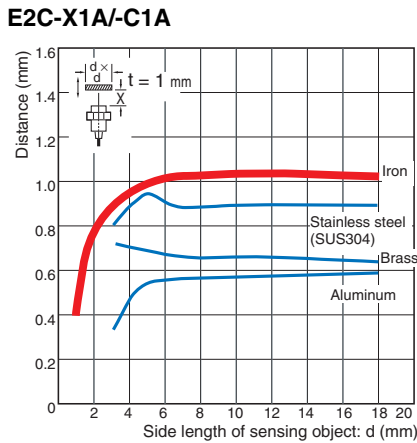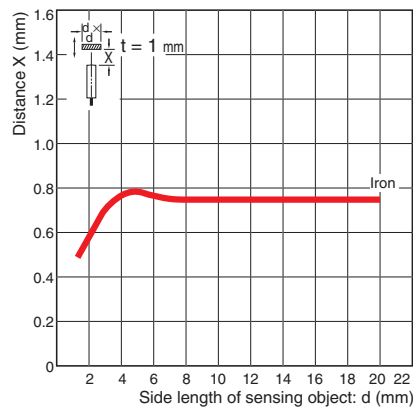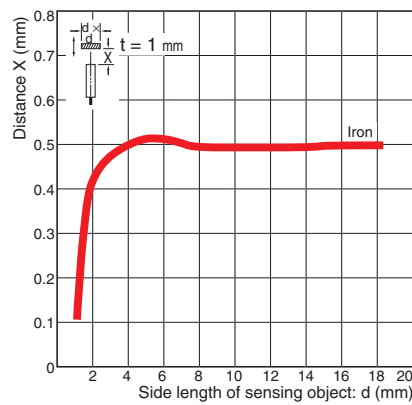

Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information

E2EC








E2C-EDA

E2C/E2C-H

E2CY

E2C/E2C-H

I/O Circuit Diagrams

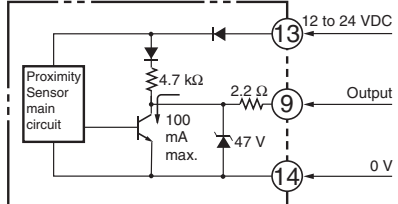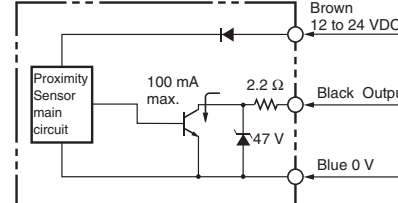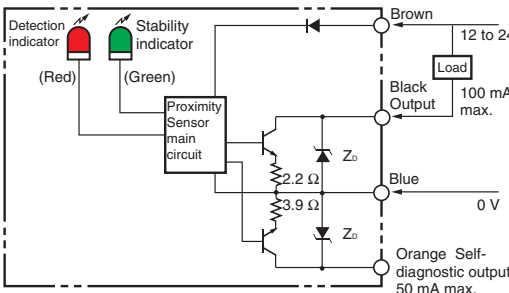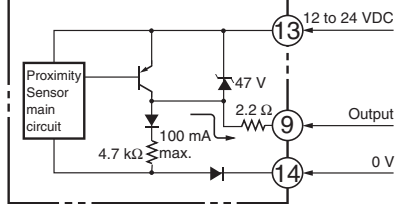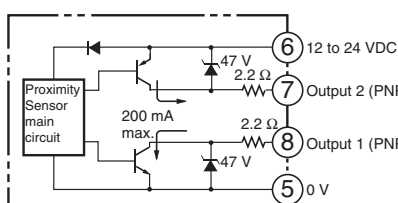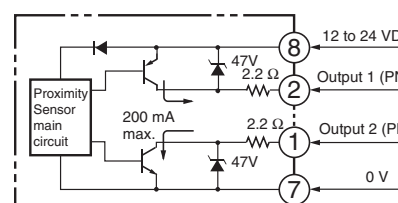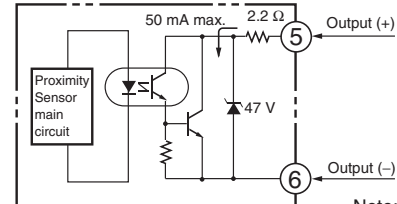Output configuration	E2C-GE4□ *	E2C-JC4A, E2C-JC4CH, E2C-JC4DH, E2C-JC4EH
NPN output	 <p>* A voltage output can be used if the NO/NC switch on the E2C-GE4□ is set to NC, but an approximately 60-ms pulse will be generated when the power supply is turned ON. An initial reset will thus be required. If the E2C-GF4□ (model for PNP output) is used, the initial pulse will not occur.</p>	
NPN output Self-diagnosis Function	<p style="text-align: center;">E2C-JC4AP</p>  <p style="text-align: center;">$Z_z: V_z = 40\text{ V}$</p>	
PNP Output	<p style="text-align: center;">E2C-GF4□</p> 	
Both NPN and PNP outputs	<p style="text-align: center;">E2C-WH4A</p> 	<p style="text-align: center;">E2C-AM4A</p> 
Transistor/photocoupler Relay output	<p style="text-align: center;">E2C-AK4A</p>  <p>Note: Terminals 1, 2, and 3 are the relay contact output (SPDT).</p>	

Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information


E2EC

E2C-EDA

E2C/E2C-H

E2CY

Connections between Amplifier Unit and Sensor

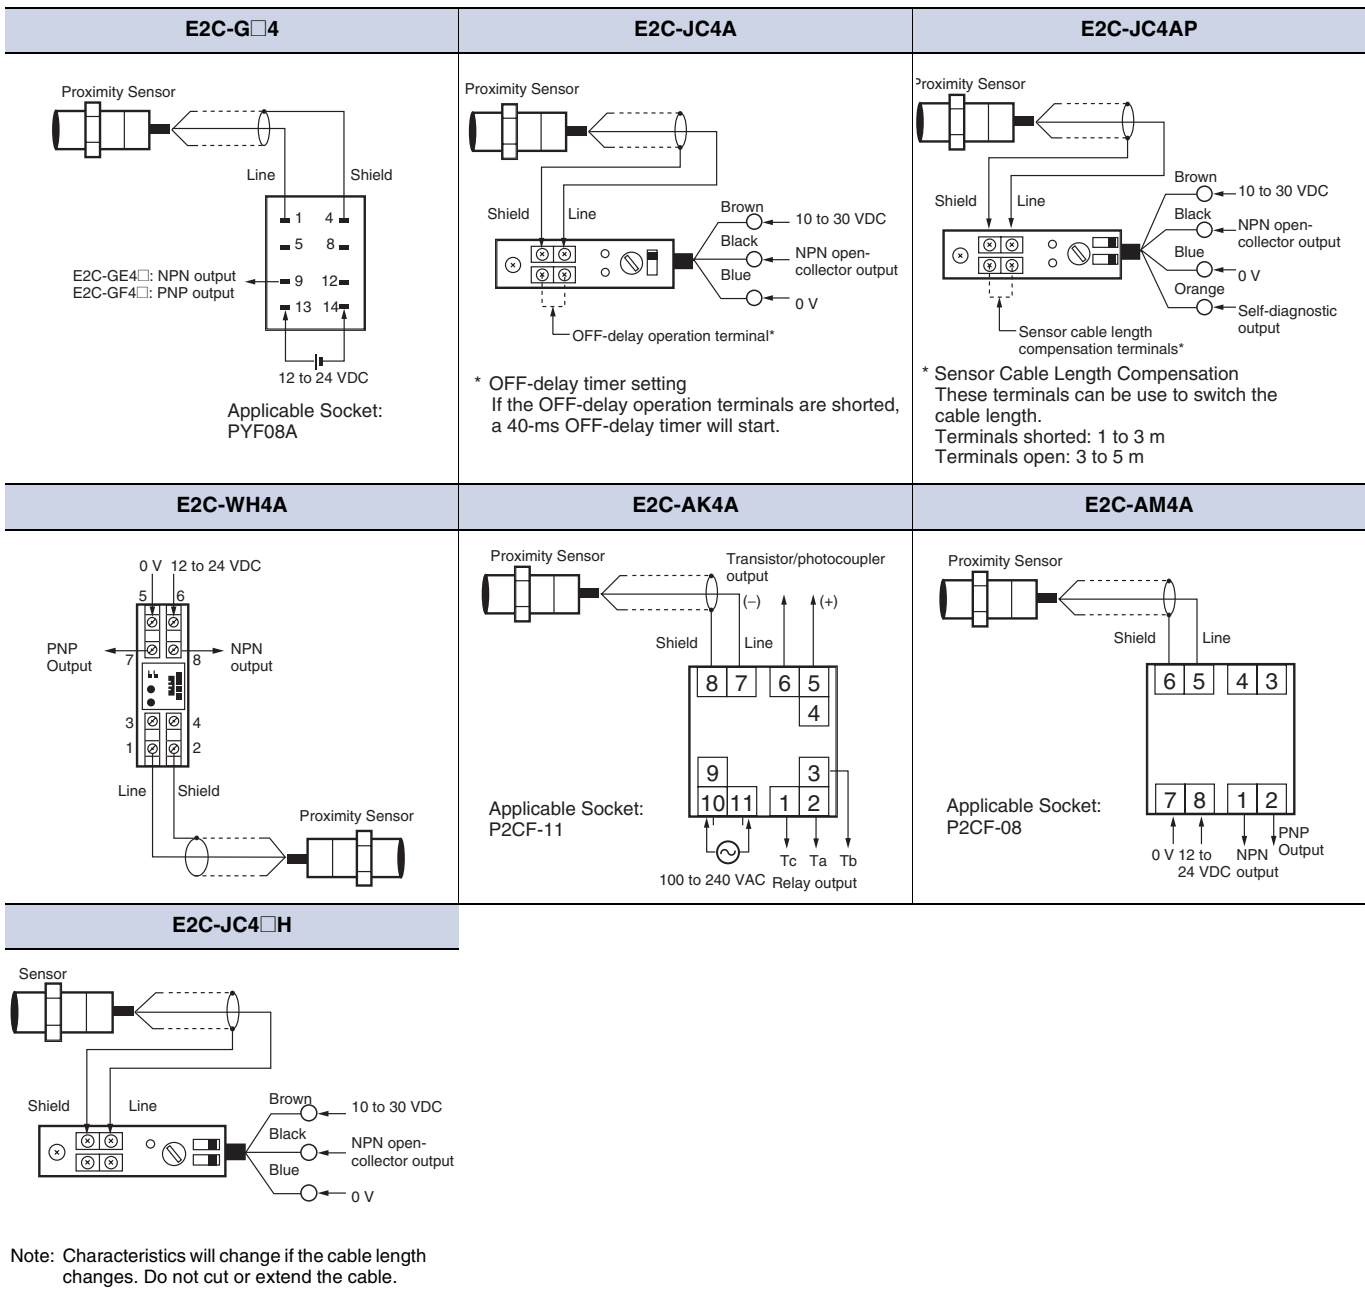

Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information

E2EC

E2C-EDA

E2C/E2C-H

E2CY

E2C/E2C-H

Load Connections

Model	E2C-JC4A, E2C-JC4□H
Load	
DC load • Relay • Solenoid	
Current-sinking load • Programmable Controller • Sensor Controller	
Voltage load (logic circuit)	

Model	E2C-WH4A
Load	
DC load • Relay • Solenoid	<p>* Use 40 V maximum when connecting the load to a separate power supply.</p>
Solid-state load • Programmable Controller • Sensor Controller (S3D8)	<p>* For a current-sourcing load, connect the PNP output.</p>
Voltage load (logic circuit)	

Note: The E2C-WH4A supports both NPN and PNP open-collector output. It can be connected to a wide variety of load types and power polarities.

Model	E2C-GE4□
Load	
DC load • Relay • Solenoid	
Solid-state load • Programmable Controller • Sensor Controller	
Voltage load (logic circuit)	<p> I_C: 20 mA max. H_{FE}: 50 mA max. V_{CE0}: 30 V min. </p>
Remarks	When connecting to a CMOS IC or TLL, provide an interface circuit as shown above and connect to the solid-state circuit in the next stage.

Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information

E2EC

E2C-EDA

E2C/E2C-H

E2CY


Load	Model	E2C-AK4A	E2C-AM4A
DC load • Relay • Solenoid			
	Solid-state load • Programmable Controller • Sensor Controller	<p>* For a current-sourcing load, connect to the negative side of the transistor/photocoupler output.</p>	<p>* For a current-sourcing load, connect the PNP output.</p>
Voltage loads (logic circuit)			

The E2C-AK4A supports relay and transistor/photocoupler outputs, and the E2C-AM4A supports both NPN and PNP open-collector output. They can be connected to a wide variety of load types and power polarities.


Nomenclature and Timing Charts

Amplifier Units


E2C-G□4□

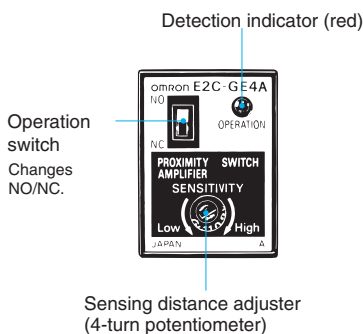


Timing Chart

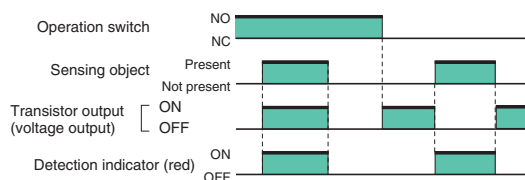

E2C-JC4A

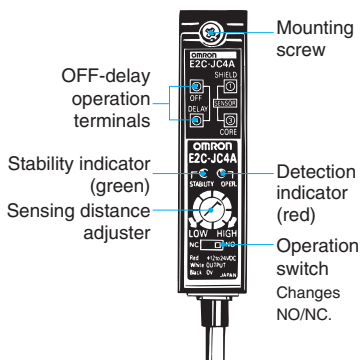

Timing Chart

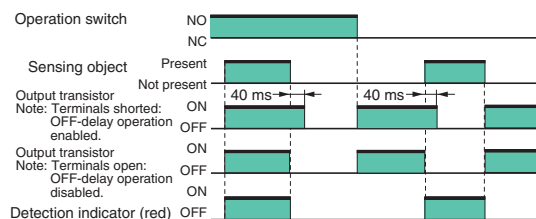

Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information

E2EC


E2C-EDA

E2C/E2C-H


E2CY

E2C/E2C-H

E2C-JC4AP

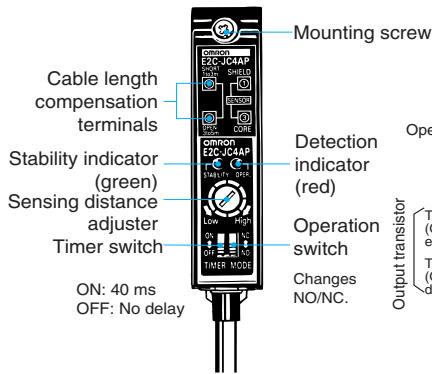


Timing Chart

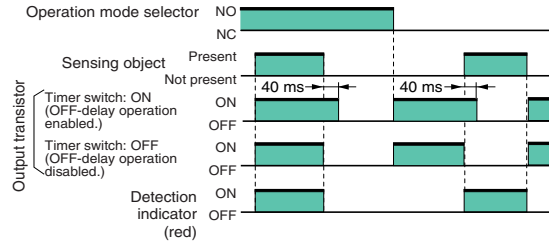


Proximity Sensors

E2C-WH4A

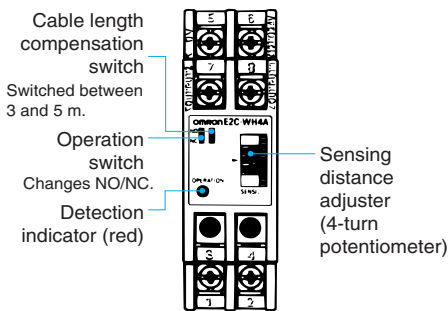

Timing Chart

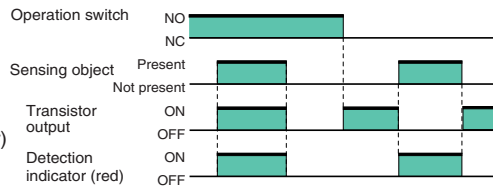

Sensing Guide


Cylindrical Models

Rectangular Models


Separate Amp/Pre-wired Connector Models

Capacitive Models

E2C-JC4CH, E2C-JC4DH, E2C-JC4EH

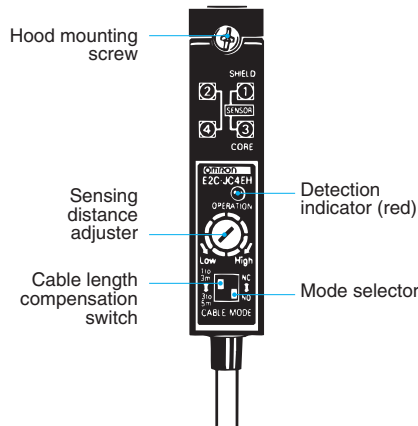

Timing Chart

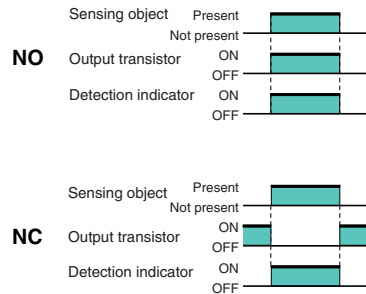



E2EC

E2C-EDA

E2C
/E2C-H

E2CY

E2C-A□4A

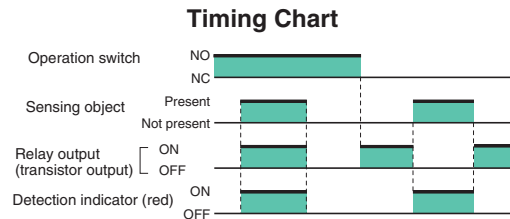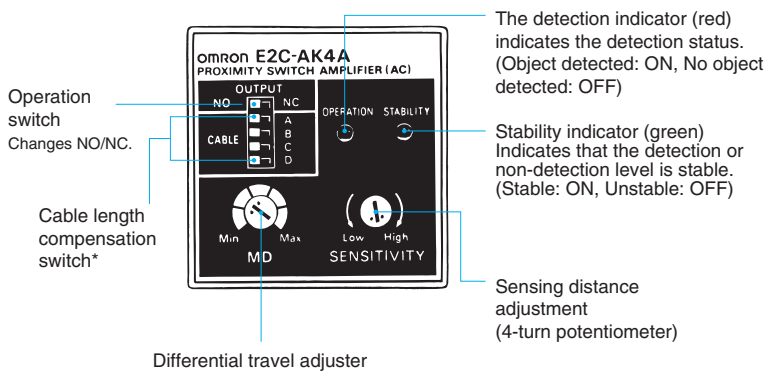

* Cable Length Compensation Switching

Set this switch to the proper setting depending on whether the standard cable length is being used or the cable has been cut shorter.

Amplifier Unit Switch Settings

Applicable Sensors	Cable length	0 to 1 m	1 to 2 m	2 to 3 m	3 to 4 m	4 to 5 m	5 to 6 m	6 to 7 m	7 to 8 m	8 to 9 m	9 to 10 m
E2C-CR8A E2C-CR8B E2C-X1A E2C-C1A E2C-X1R5A							—	—	—	—	—
E2C-X2A E2C-X5A E2C-X10A E2C-C20MA											

Note: 1. Mutual Interference Prevention: When mounting Sensors with the same diameter and cable length in parallel, set the DIP switch to modes that differ by 1 m in cable length. Specifications, however, may not be sufficiently met, so always check operation before actual application. This method cannot be used for the E2C-C20MA.

2. When using the E2C-CR5B + E2C-AM4A (or AK4A), set all the pins on the Amplifier Unit DIP switch to the left.

Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information

E2EC

E2C-EDA

E2C/E2C-H

E2CY

E2C/E2C-H

Safety Precautions

Refer to *Warranty and Limitations of Liability* on page F-2.

⚠ WARNING

This product is not designed or rated for ensuring safety of persons. Do not use it for such purposes.




Precautions for Correct Use

Do not use the Encoder under ambient conditions that exceed the ratings.

● Design

Influence of Surrounding Metal

When mounting the Sensor within a metal panel, ensure that the clearances given in the following table are maintained. Failure to maintain these distances may cause deterioration in the performance of the Sensor.

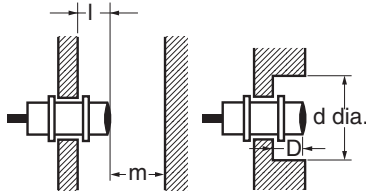

Influence of Surrounding Metal (Unit: mm)


Model	Distance	l	d	D	m
E2C-CR5B		2	6	2	1.5
E2C-CR8			(3.5)		2.4
E2C-X1A			(5)		3
E2C-C1A			(5.4)		
E2C-X1R5A(H)	0		(8)	0	4.5
E2C-X2A(H)			(12)		6
E2C-X5A(H)			(18)		15
E2C-X10A			(30)		30
E2C-C20MA	25	120	40	60	

Note: Values in parentheses for diameter d are the outer diameters of Shielded Models.

Mutual Interference

When installing Sensors face-to-face or side-by-side, ensure that the minimum distances given in the following table are maintained. Mutual interference can be prevented by using the cable length compensation switch, but doing so will also change coil characteristics. Specifications such as temperature specifications and sensing distance, may not be sufficiently met, so always check operation before actual application.

This method cannot be used for the E2C-G□4A, E2C-JC4A, E2C-CR5B, E2C-C20MA.

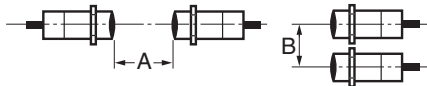


Mutual Interference (Unit: mm)

Model	Distance	A	B
E2C-CR5B		20	15
E2C-CR8			
E2C-X1A			
E2C-C1A			
E2C-X1R5A(H)		30	20
E2C-X2A(H)			
E2C-X5A(H)			
E2C-X10A		100	70
E2C-C20MA		300	200

Note: The above values are for a differential travel setting of 5%.

Mounting

- Do not use excessive force when tightening the nuts on the E2C-X and E2C-C20MA. A washer must be used with the nut.

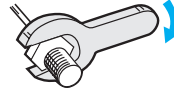


Model	Torque
E2C-X1A	0.98 N·m
E2C-X1R5A(H)	2.0 N·m
E2C-X2A(H)	5.9 N·m
E2C-X5A(H)	15 N·m
E2C-X10A	39 N·m
E2C-C20MA	15 N·m


Note: The above leeways in tighten torque assume that a toothed washer is being used.

● Mounting Unthreaded Cylindrical Models

When using a set screw, tighten it to a torque of 0.2 N·m max.

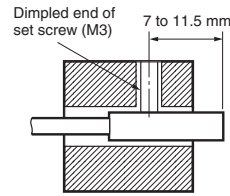

Y92E-F3R5 Mounting Bracket (for 3.5 dia.) (Order Separately)

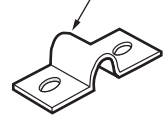

The Y92E-F5R4 (for 5.4 dia.) is also sold separately.


● Mounting

Mounting the Amplifier Unit

E2C-JC4A, E2C-JC4□H


Lengthwise Mounting

- (1) Secure the Mounting Bracket with the enclosed M3 screws.
- (2) Slide the protrusion on the Amplifier Unit into the holes on the Mounting Bracket.
- (3) Secure the Amplifier Unit with mounting screws.
- (4) Secure the cover to the case.

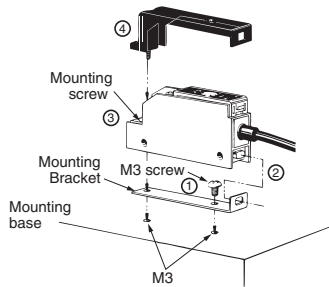

Mounting to the Side

- (1) Remove the cover screw and mounting screw.
- (2) Attached the enclosed M3 screw to the cover and secure the cover to the case.
- (3) Secure the Amplifier Unit with M3 screws from the side.

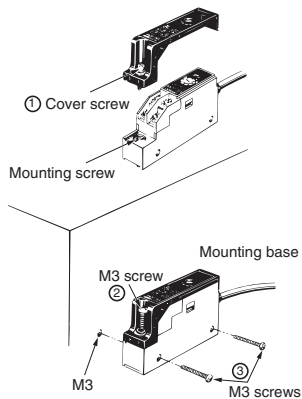


After completing adjustments, attach the enclosed caution label over the adjustment holes to prevent adjustment mistakes.



E2C-WH4A


Mounting Method

- (1) Mount to DIN Track as shown in the following diagram.
- (2) Hook part (A) at the top of the Amplifier Unit on the DIN Track first and then press in on the Amplifier Unit in the direction indicated by (B).

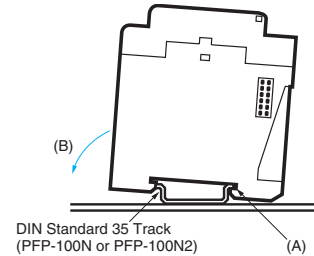

Removing the Amplifier Unit

- (3) Pull down on the track stopper (C) with a flat-blade screwdriver and then remove the Amplifier Unit from the DIN Track. When using DIN standard 35 track, keep other devices on the track separated from the Amplifier Unit by at least 30 mm to facilitate mounting and removal.

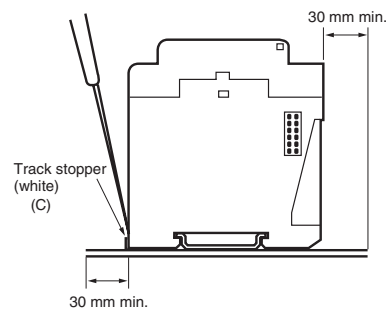

Proximity Sensors

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information

E2EC

E2C-EDA

E2C/E2C-H


E2CY

E2C/E2C-H

E2C-A□4A

Using P2CF-11, P2CF-08


When aligning the Amplifier Unit vertically with the Socket, consider the space required for the hooks and allow a leeway of about 20 mm above and below the Amplifier Unit.

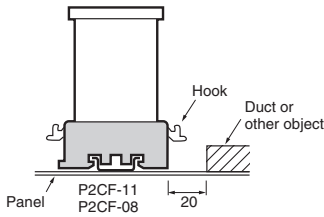


Proximity Sensors

Mounting Embedded in a Panel

(1) When using the Y92F-30 Embedded Mounting Adapter, insert the Amplifier Unit into a square hold in the panel, attach the Adapter from the back and press in to reduce the gap with the panel. Then secure the Adapter with the screws.

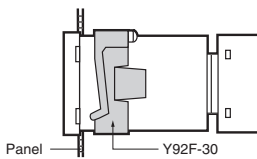


(2) When using the Y92F-70 or Y92F-71 Embedded Mounting Adapter, just press the Amplifier into a square hole in the panel. If the panel coating is too thick and the hooks do not lock in place, spread the hooks from the back by pushing in the directions of the arrows.

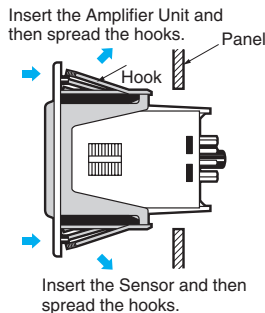


Removing the Amplifier Unit

• When the Amplifier Unit is mounted using the Y92F-30, loosen the screws on the adapter, spread the hooks at the top and bottom, and remove the Adapter.

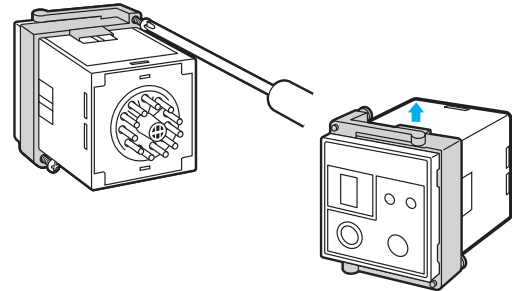

• Using Y92F-70, Y92F-71
Press in on the hooks with your thumb and forefinger and press forward on the Amplifier Unit.

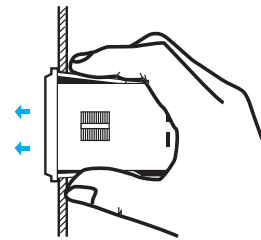

● Wiring

Self-diagnostic Output

When not using the self-diagnostic output, connect the orange wire to 0 V or cut it and wrap it with insulation tape so that it does not come into contact with other terminals.

● Miscellaneous

The sensor does not have a water-resistant structure. Do not use it where it would be subjected to water or water vapor.

Sensing Guide

Cylindrical Models

Rectangular Models

Separate Amp/Pre-wired Connector Models

Capacitive Models

Others

Peripheral Devices

General Information

E2EC

E2C-EDA

E2C/E2C-H


E2CY

Dimensions

Main Units Sensor


E2C-CR5B

CAD data

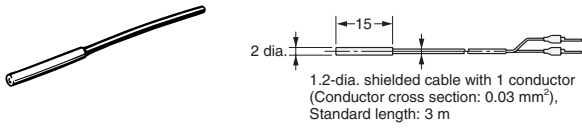


E2C-CR8A/-CR8B

CAD data

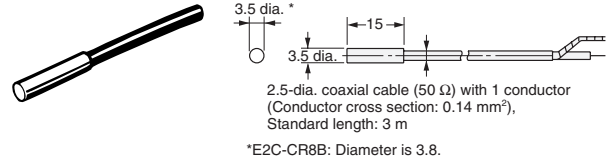


E2C-X1A

CAD data

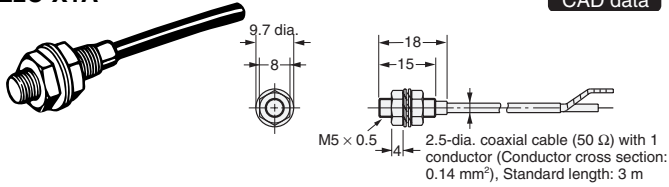

E2C-C1A


CAD data

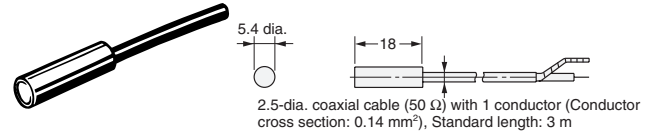

E2C-X1R5A

E2C-X1R5AH*


CAD data

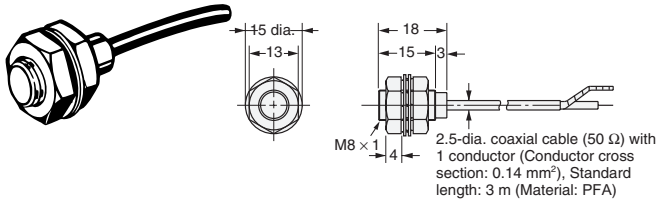

E2C-X2A

E2C-X2AH*


CAD data

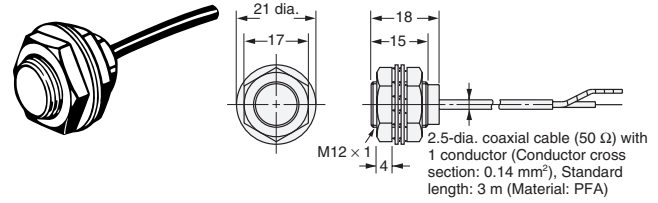

E2C-X5A


E2C-X5AH*

CAD data

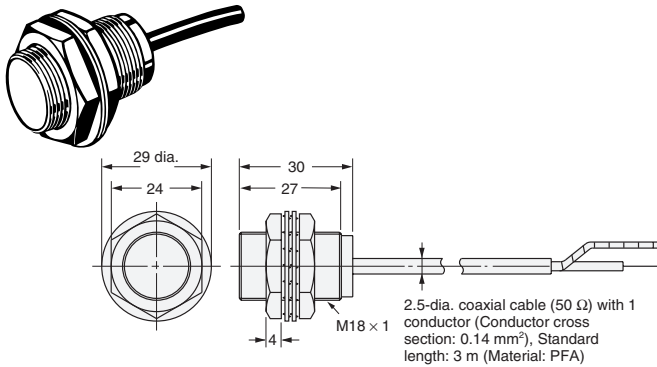


E2C-X10A

CAD data

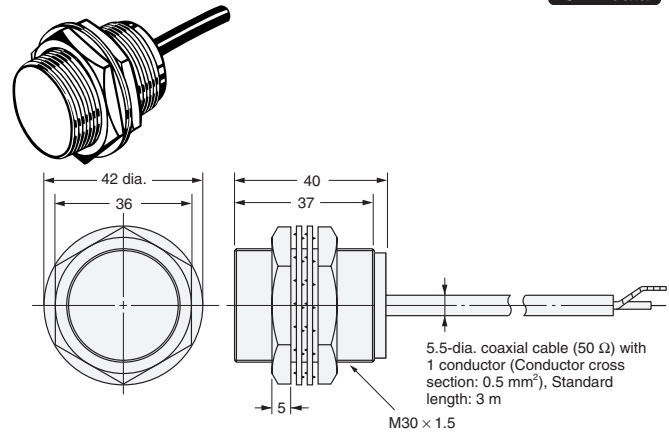


E2C-C20MA

CAD data

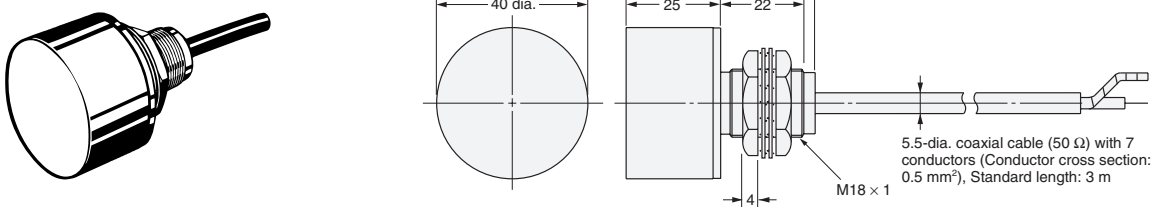

Mounting Hole Dimensions

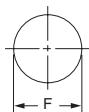

Model	F (mm)	Model	F (mm)	Model	F (mm)
E2C-CR5B	2.2-dia. $\begin{smallmatrix} +0.3 \\ 0 \end{smallmatrix}$	E2C-X1A	5.4-dia. $\begin{smallmatrix} +0.5 \\ 0 \end{smallmatrix}$	E2C-X5A	18.5-dia. $\begin{smallmatrix} +0.5 \\ 0 \end{smallmatrix}$
E2C-CR8A	3.7-dia. $\begin{smallmatrix} +0.3 \\ 0 \end{smallmatrix}$	E2C-X1R5A	8.5-dia. $\begin{smallmatrix} +0.5 \\ 0 \end{smallmatrix}$	E2C-X10A	30.5-dia. $\begin{smallmatrix} +0.5 \\ 0 \end{smallmatrix}$
E2C-CR8B	4.0-dia. $\begin{smallmatrix} +0.3 \\ 0 \end{smallmatrix}$	E2C-X2A	12.5-dia. $\begin{smallmatrix} +0.5 \\ 0 \end{smallmatrix}$	E2C-C20MA	18.5-dia. $\begin{smallmatrix} +0.5 \\ 0 \end{smallmatrix}$
E2C-C1A	5.7-dia. $\begin{smallmatrix} +0.3 \\ 0 \end{smallmatrix}$				

Proximity
Sensors

Sensing
Guide

Cylindrical
Models

Rectangular
Models

Separate Amp/
Pre-wired
Connector
Models

Capacitive
Models

Others

Peripheral
Devices

General
Information

E2EC

E2C-EDA

E2C
/E2C-H


E2CY

E2C/E2C-H

Amplifier Units

E2C-GE4A, -GE4B E2C-GF4A, -GF4B

CAD data

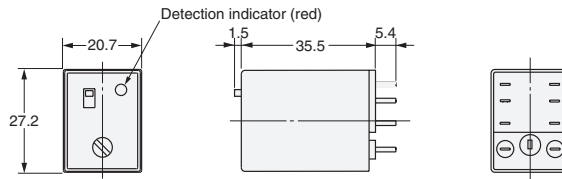

Applicable Sockets (Sold Separately)



- PYF08A

Hold-down Clip

- PYC-A1

E2C-AK4A (11-pin) E2C-AM4A (8-pin)

CAD data

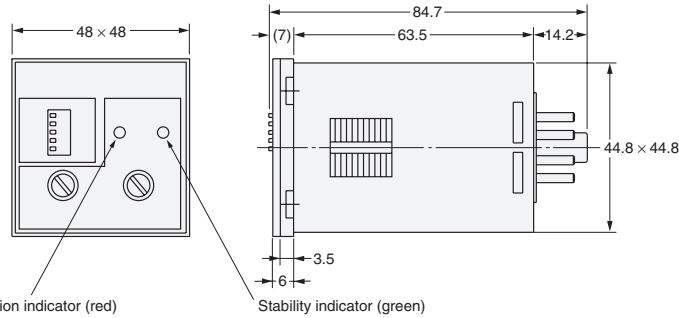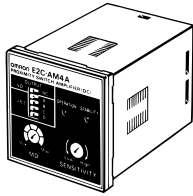

Applicable Sockets (Sold Separately)

For E2C-AK4A (11-pin)

- P2CF-11
- P3GA-11

For E2C-AM4A (8-pin)

- P2CF-08
- P3G-08

Proximity
Sensors

Sensing
Guide

Cylindrical
Models

Rectangular
Models

Separate Amp/
Pre-wired
Connector
Models

Capacitive
Models

Others




Peripheral
Devices

General
Information


E2C-JC4A

Mounting Bracket Installation

CAD data

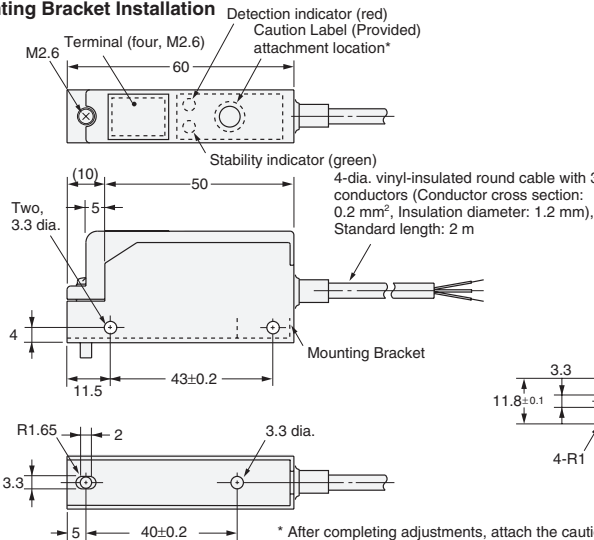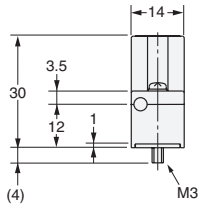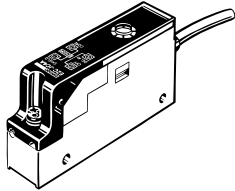




Mounting Bracket (Iron)

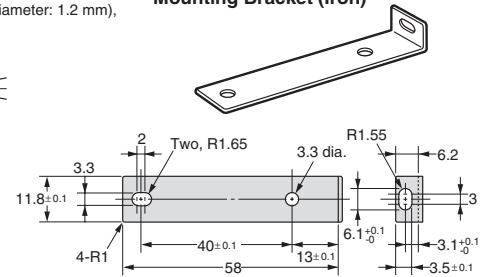


E2C-JC4AP

Mounting Bracket Installation

CAD data

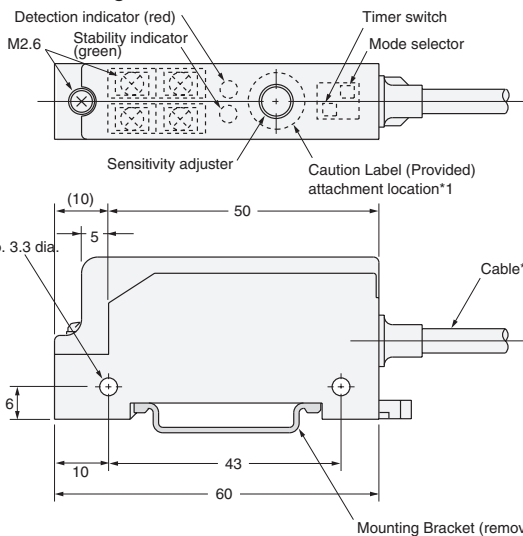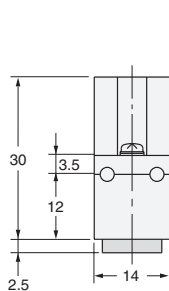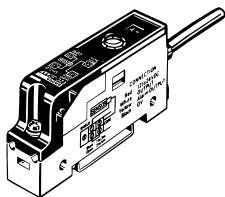

Mounting Bracket (Iron)

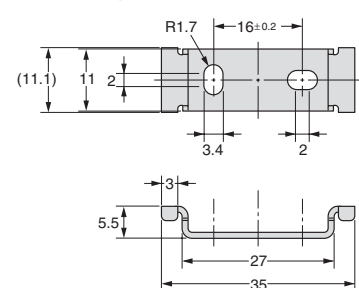



*1. After completing adjustments, attach the caution label to prevent adjustment mistakes.

*2. Not required when mounting to DIN Track.

*3: 4.5-dia. vinyl-insulated round cable with 4 conductors (Conductor cross section: 0.2 mm², Insulator diameter: 1.2 mm), Standard length: 2 m

E2C-JC4□H



CAD data

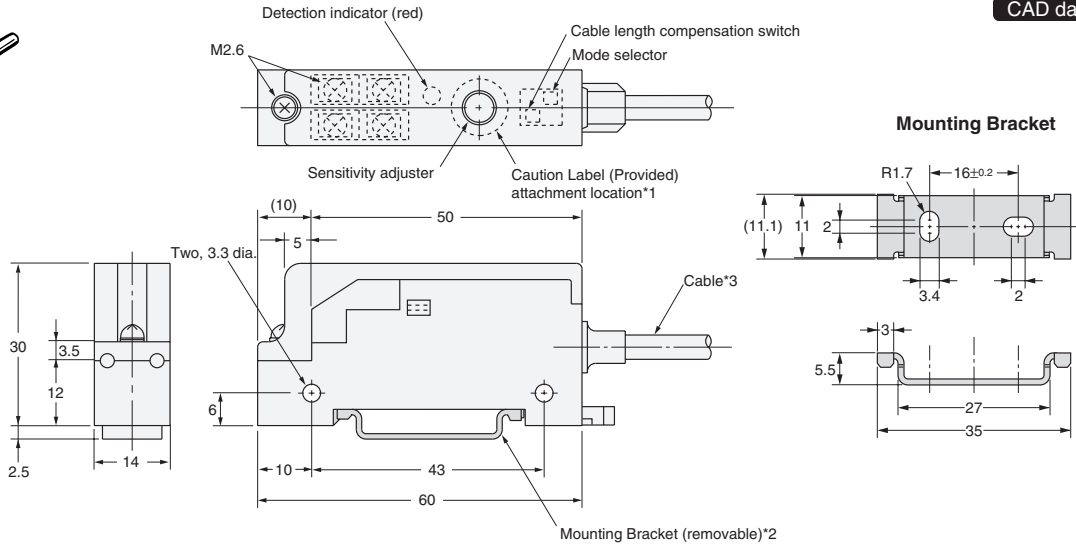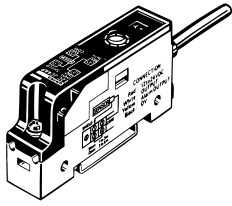

- *1. After completing adjustments, attach the caution label to prevent adjustment mistakes
- *2. Not required when mounting to DIN Track.
- *3. 4-dia. vinyl-insulated round cable with 3 conductors (Conductor cross section: 0.2 mm², Insulator diameter: 1.2 mm), Standard length: 2 m
The cable can be extended up to 200 m (separate metal conduit).

E2C-WH4A

CAD data

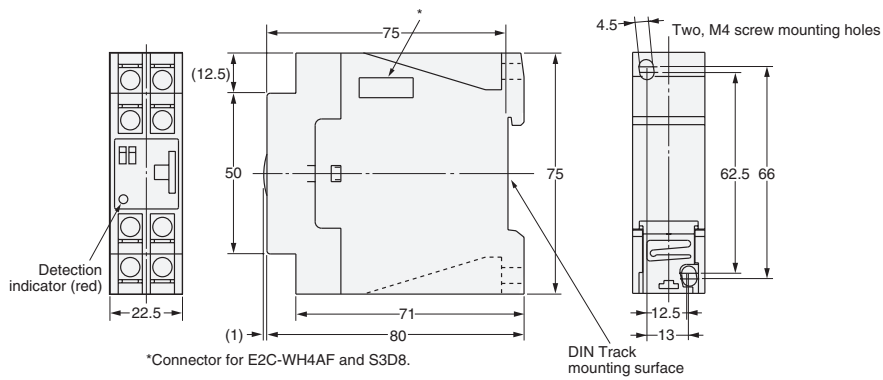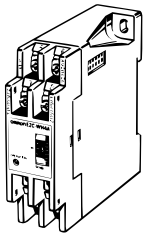

Proximity
Sensors

Sensing
Guide

Cylindrical
Models

Rectangular
Models

Separate Amp/
Pre-wired
Connector
Models

Capacitive
Models

Others

Peripheral
Devices

General
Information

E2EC

E2C-EDA

E2C
/E2C-H

E2CY


E2C/E2C-H

Accessories (Order Separately)


Mounting Bracket

Mounting Bracket (for Unthreaded Cylindrical Models)


Y92E-F3R5 (for 3.5 dia.)
Y92E-F5R4 (for 5.4 dia.)

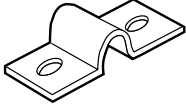

Y92E-F3R5

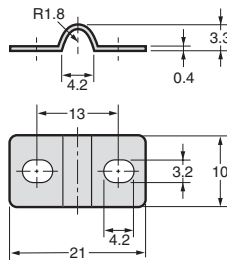

Y92E-F5R4

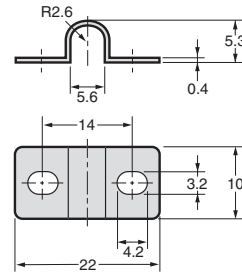

Proximity Sensors

Front Connection Sockets

PYF08A



Sensing Guide

Cylindrical Models


Rectangular Models

Separate Amp/Pre-wired Connector Models


Capacitive Models

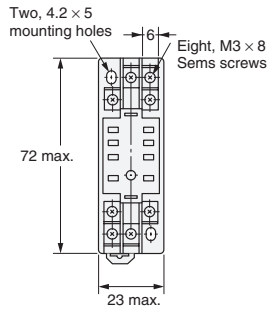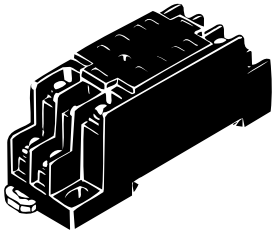

Terminal Arrangement and Internal Connections (Top View)

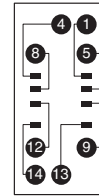

Mounting Hole Dimensions

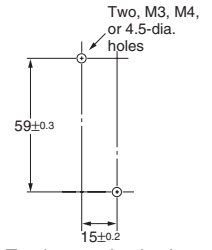



Note: Track mounting is also possible.

P2CF-08


Others

Peripheral Devices


General Information

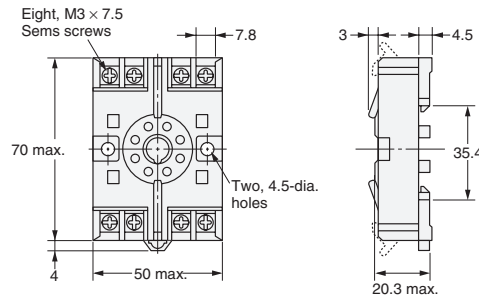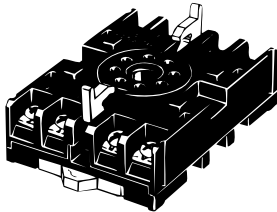

Terminal Arrangement and Internal Connections (Top View)

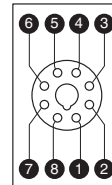

Mounting Hole Dimensions

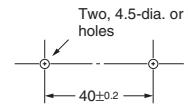

Note: Track mounting is also possible.



P2CF-11

E2EC


E2C-EDA

E2C/E2C-H


E2CY

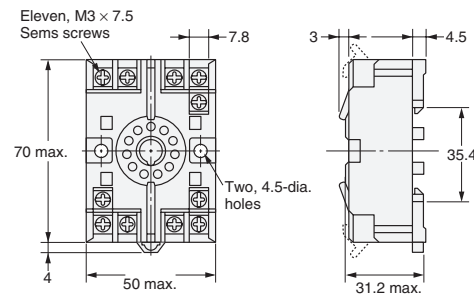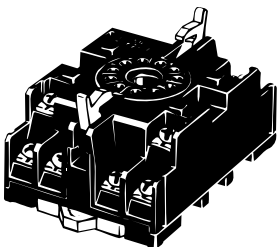

Terminal Arrangement and Internal Connections (Top View)

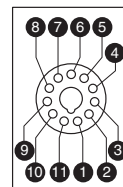



Mounting Hole Dimensions

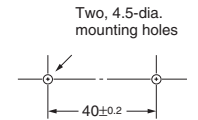


Note: Track mounting is also possible.

Back Connection Sockets



P3G-08

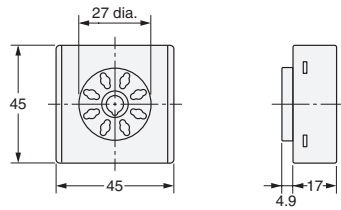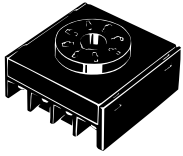


Terminal Arrangement and Internal Connections (Bottom View)

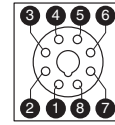

P3GA-11

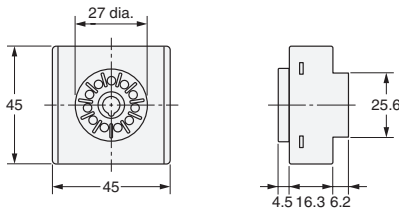
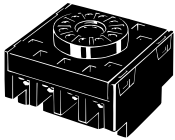


Terminal Arrangement and Internal Connections (Bottom View)

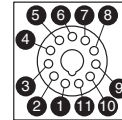


Embedded Mounting Adapter (for E2C-AK4A/E2C-AM4A Amplifier Unit)

Y92F-30

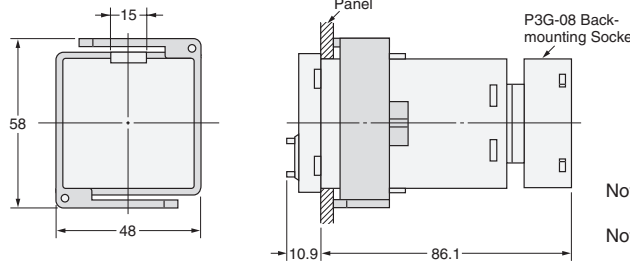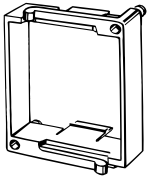



Mounting Hole Dimensions

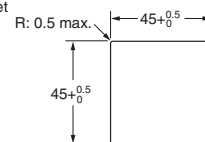


Note 1. Suitable mounting panel thickness: 1 to 5 mm

Note 2. Check the direction of the Adapter, which depends on whether Amplifier Units are arranged vertically or horizontally.

Y92F-70

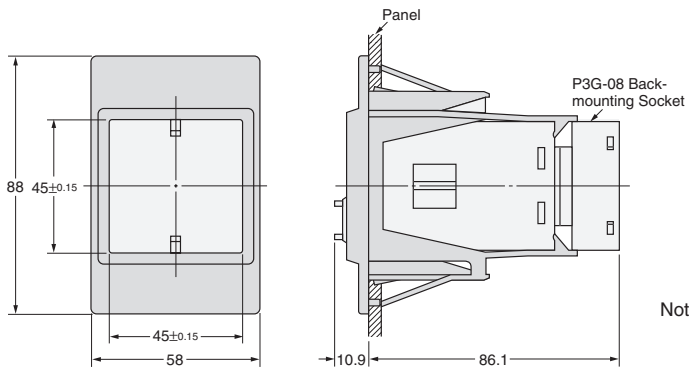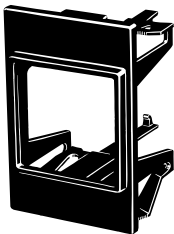


Mounting Hole Dimensions

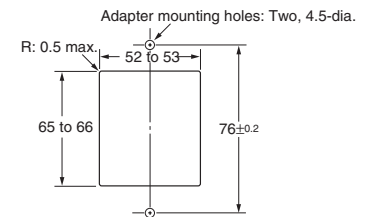


Note: Suitable mounting panel thickness: 1 to 3.2 mm

Y92F-71

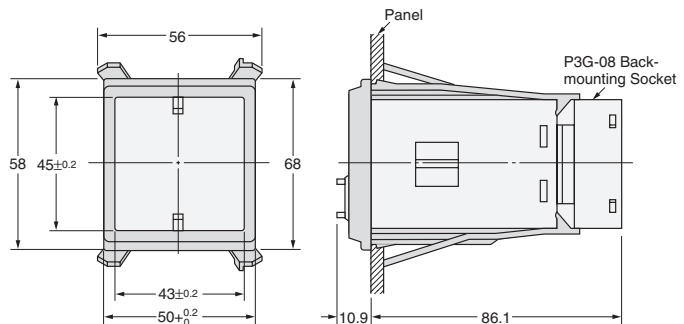

Mounting Hole Dimensions

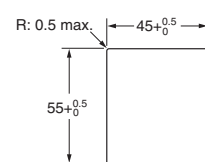

Note: Suitable mounting panel thickness: 1 to 3.2 mm