# Timer Interval Indicator K3HB-P

## Digital Time Interval Meter for Measuring Passing Speed, Time, or Cycle between Two Points.

- Measures Wide Range of Pulse Interval Times
   Measures, calculates, and displays pulse intervals between two
   points. Wide range for pulse interval measurements, from 10 ms to
   3.200 s. max.
- Six Measurement Operations, Including Passing Speed, Time, and Cycle Measurement between Two Points
   One Digital Time Interval Meter has six measurement functions, to support a variety of pulse interval measurement applications. Select the best function for your application from the following: Passing speed, cycle, time difference, time band, measuring length, and interval





Refer to Common Precautions on page 30.

## **Model Number Structure**

## ■ Model Number Legend

Base Units and Optional Boards can be ordered individually or as sets.

#### **Base Units**

K3HB-P \_\_ \_\_\_\_

1. Input Sensor Codes

NB: NPN input/voltage pulse input PB: PNP input

5. Supply Voltage

100-240 VAC: 100 to 240 VAC 24 VAC/VDC: 24 VAC/VDC

## **Optional Board**

Sensor Power Supply/Output Boards

K33-□

Relay/Transistor Output Boards

**K34-**□

**Event Input Boards** 

**K35-**□

#### **Base Units with Optional Boards**

2. Sensor Power Supply/Output Type Codes

None: None

CPA: Relay output (PASS: SPDT) + Sensor power supply

(12 VDC±10%, 80 mA) (See note 1.)

L1A: Linear current output (DC0(4)-20 mA) + Sensor power supply

(12 VDC±10%, 80 mA) (See note 2.)

L2A: Linear voltage output (DC0(1)-5 V, 0 to 10 V) + Sensor power supply

(12 VDC±10%, 80 mA) (See note 2.)

A: Sensor power supply (12 VDC ±10%, 80 mA)

FLK1A: Communications (RS-232C) + Sensor power supply

(12 VDC±10%, 80 mA) (See note 2.)

FLK3A: Communications (RS-485) + Sensor power supply

(12 VDC±10%, 80 mA) (See note 2.)

3. Relay/Transistor Output Type Codes

None: None

C1: Relay contact (H/L: SPDT each)

C2: Relay contact (HH/H/LL/L: SPST-NO each)

T1: Transistor (NPN open collector: HH/H/PASS/L/LL)

T2: Transistor (PNP open collector: HH/H/PASS/L/LL)

BCD: BCD output + transistor output (NPN open collector: HH/H/PASS/L/LL)

DRT: DeviceNet (See note 2.)

#### 4. Event input Type Codes

None: None

1: 5 points (M3 terminal blocks) NPN open collector

2: 8 points (10-pin MIL connector) NPN open collector

3: 5 points (M3 terminal blocks) PNP open collector

8 points (10-pin MIL connector) PNP open collector

Note: 1. CPA can be combined with relay outputs only.

2. Only one of the following can be used by each Digital Indicator: RS-232C/RS-485 communications, a linear output, or DeviceNet communications.

## **Accessories (Sold Separately)**

K32-DICN: Special Cable (for event inputs with 8-pin connector)

K32-BCD: Special BCD Output Cable

## **Specifications**

## **■** Ratings

Supply voltage		100 to 240 VAC, 24 VAC/VDC, DeviceNet power supply: 24 VDC			
Allowable powerange	er supply voltage	85% to 110% of the rated power supply voltage, DeviceNet power supply: 11 to 25 VDC			
Power consump (See note 1.)	otion	100 to 240 VAC: 18 VA max. (max. load) 24 VAC/DC: 11 VA/7 W max. (max. load)			
Current consun	nption	DeviceNet power supply: 50 mA max. (24 VDC)			
Input		No-voltage, voltage pulse, open collector			
<b>External power</b>	supply	12 VDC 10%, 80 mA (for models with external power supplies only)			
	Hold input	NPN open collector or no-voltage contact signal			
(See note 2.)	Reset input	ON residual voltage: 2 V max. ON current at 0 Ω: 4 mA max.			
	Bank input	Max. applied voltage: 30 VDC max.  OFF leakage current: 0.1 mA max.			
Output ratings (depends on the model)	Relay output	250 VAC, 30 VDC, 5 A (resistive load)  Mechanical life expectancy: 5,000,000 operations, Electrical life expectancy: 100,000 operations			
the model)	Transistor output	Maximum load voltage: 24 VDC, Maximum load current: 50 mA, Leakage current: 100 μA max.			
	Linear output	Linear output 0 to 20 mA DC, 4 to 20 mA:  Load: 500 Ω max, Resolution: Approx. 10,000, Output error: ±0.5% FS  Linear output 0 to 5 VDC, 1 to 5 VDC, 0 to 10 VDC:  Load: 5 kΩ max, Resolution: Approx. 10,000, Output error: ±0.5% FS  (1 V or less: ±0.15 V; not output for 0 V or less)			
Display method		Negative LCD (backlit LED) display 7-segment digital display (Character height: PV: 14.2 mm (green/red); SV: 4.9 mm (green))			
Main functions		Scaling function, measurement operation selection, output hysteresis, output OFF delay, output test, teaching, display value selection, display color selection, key protection, bank selection, display refresh period, maximum/minimum hold, reset			
Ambient operat	ing temperature	−10 to 55°C (with no icing or condensation)			
Ambient operat	ing humidity	25% to 85%			
Storage temper	ature	-25 to 65°C (with no icing or condensation)			
Altitude		2,000 m max.			
Accessories		Watertight packing, 2 fixtures, terminal cover, unit stickers, instruction manual. DeviceNet models also include a DeviceNet connector (Hirose HR31-5.08P-5SC(01)) and crimp terminals (Hirose HR31-SC-121) (See note 3.)			

Note: 1. DC power supply models require a control power supply capacity of approximately 1 A per Unit when power is turned ON. Particular attention is required when using two or more DC power supply models. The OMRON S8VS-series DC Power Supply Unit is recommended.

- 2. PNP input types are also available.
- 3. For K3HB-series DeviceNet models, use only the DeviceNet Connector included with the product. The crimp terminals provided are for Thin Cables.

## **■** Characteristics

Display range		-19,999 to 99,999							
Measurement accur (at 23±5°C)	асу	±0.08% rgd ±1 digit (for voltage pulse/open collector sensors)							
Measurement range		Functions F1, F3, and F4:10 ms to 3,200 s Function F2: 20 ms to 3,200 s Functions F5 and F6: 0 to 4 gigacounts							
Input signals		•	No-voltag	e contact (30 Hz n	nax. with ON/O	FF pulse width	of 15 ms min.)		\/- +
			Mode	Input frequency range	ON/OFF pulse width	ON voltage	OFF voltage	Input impedance	Voltage pulse
			F1 to F4	0 to 50 kHz	9 μs min.	4.5 to 30 V	-30 to 2 V	10 kΩ	
			F5, F6	0 to 30 kHz	16 μs min.				
			Mode	Input frequency range	ON/OFF pulse width	will	Digital Time Int	pulse greater	•Opencollector
			F1 to F4	0 to 50 kHz	9 μs min.	thar	the input frequit. SYSERR ma	ency range is	
			F5, F6	0 to 30 kHz	16 μs min.		display.	y appour on	
Connectable sensors		O L	OFF leakaç oad currei		max. ave a switching e able to proper	ly switch load o	currents of 5 mA		in the input signal
Comparative output time (transistor out		fr	om 15% t	o 95% or 95% to 1	5%)				
Linear output response time		10 ms max. (time until the final analog output value is reached when there is a forced sudden change in the input signal from 15% to 95% or 95% to 15%)							
Insulation resistance	e	2	0 MΩ min	. (at 500 VDC)					
Dielectric strength		2,300 VAC for 1 min between external terminals and case							
Noise immunity		100 to 240 VAC models:  ±1,500 V at power supply terminals in normal or common mode (waveform with 1-ns rising edge and pulse width of 1 μs/100 ns)  24 VAC/VDC models:  ±1,500 V at power supply terminals in normal or common mode (waveform with 1-ns rising edge and pulse width of 1 μs/100 ns)							
Vibration resistance	)	Frequency: 10 to 55 Hz; Acceleration: 50 m/s², 10 sweeps of 5 min each in X, Y, and Z directions							
Shock resistance		150 m/s² (100 m/s² for relay outputs) 3 times each in 3 axes, 6 directions							
Weight		Approx. 300 g (Base Unit only)							
Degree of	Front panel	С	onforms t	o NEMA 4X for inc	door use (equiva	alent to IP66)			
protection	Rear case	IP20							
	Terminals	IP00 + finger protection (VDE0106/100)							
Memory protection		EEPROM (non-volatile memory)							
Applicable standard	ls	Number of rewrites: 100,000  UL61010C-1, CSA C22.2 No. 1010.1 (evaluated by UL)  EN61010-1 (IEC61010-1): Pollution degree 2/Overvoltage category II  EN61326: 1997, A1: 1998, A2: 2001							
EMC		E R E S C P	lectromage CISPR erminal in CISPR MS: EN6100 adiated EEN6100 lectrical FEN6100 urge Imm EN6100 cower Freq EN6100 foltage Dige Coltage Dige Coltage Dige CISPR CISP	326+A1 industrial inetic radiation inte 11 Group 1, Class terference voltage 11 Group 1, Class 1326+A1 industrial c Discharge Immu 00-4-2: 4 kV (contallectromagnetic Fie 00-4-3: 10 V/m 1 ki ast Transient/Burs 100-4-6: 3 V (powe unity 100-4-6: 3 V (0.15 to puency Magnetic Impo-4-8: 30 A/m (50 and Interruption 100-4-11: 0.5 cycle,	erference A: CISPRL16- A: CISPRL16- I applications Inity act), 8 kV (in air) eld Immunity Hz sine wave at t Immunity er line), 1 kV (I/C ne (power line), unity b 80 MHz) munity Hz) continuous s Immunity	1/-2 mplitude modu 0 signal line) 2 kV with grou	,	,	Hz to 2 GHz)


## **Operation**

## **■** Functions (Operating Modes)

#### F1 to F6

These functions use the internal system clock to measure the time between pulses or the pulse ON time and then display time measurements or a variety of other calculations.

Function name	Function No.
Passing speed	F !
Cycle	F2
Time difference	F3
Time band	FY
Measuring length	FS
Interval	FS

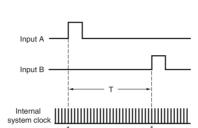


Example: F1 Passing Speed


The time (T) between input A pulse and input B pulse is measured by the internal system clock. If, for example, the system clock measures 100,000 counts during time T, then

T = 1 system clock count (0.5  $\mu$ s)  $\times$  100,000

F1 (the passing speed) is calculated internally using the formula  $\frac{1}{T} \times 60$  (m/min), and the

display, in this example, would be  $\frac{1}{0.05\,\text{s}} \times 60 = 1200$  (m/min).

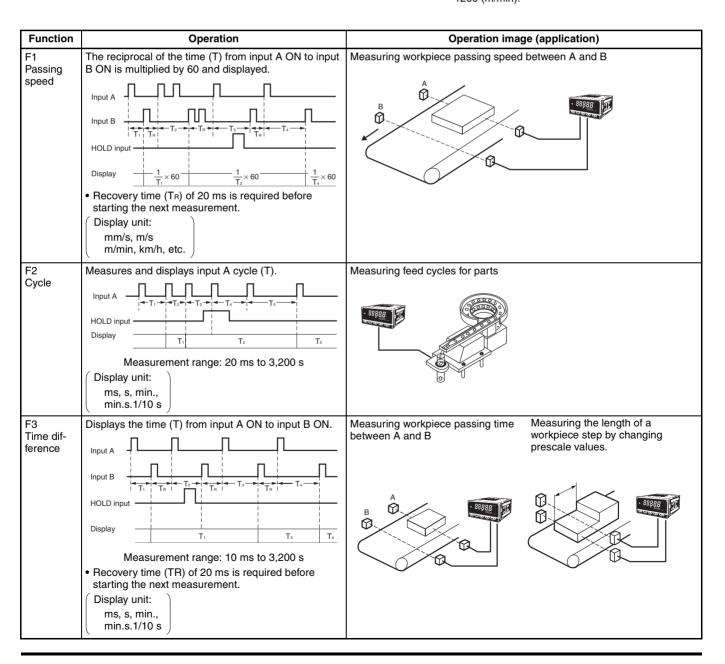

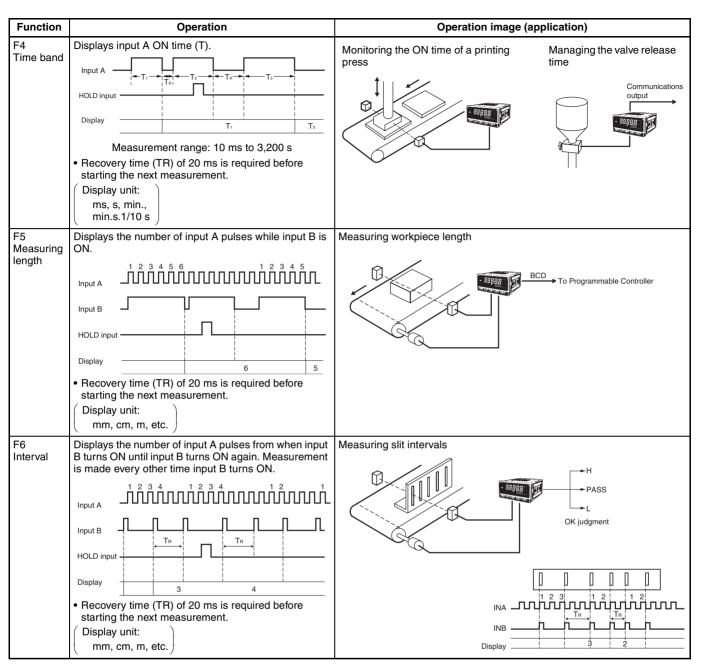

## ■ What Is Prescaling?

To make calculations using the input pulse to display the passing speed between two points, the distance between the two points and the display unit must be set and the internally measured time multiplied by a certain coefficient. This coefficient is called the prescale value. (For information on settings details, refer to the User's Manual.)

#### **Time Unit Settings**

Setting	Meaning
SERL	Prescale value menu setting
ŭŗu	Minute display
H.ňň.55	h.mm.ss display
ňň.55.d	mm.ss.d display (d = tenths of a second)

#### **Input Type Setting**

	NO: Voltage pulse high	NC: Voltage pulse low
No-contact or voltage pulse input	00	0 1
Contact	10	11

Note: Set to 10 or 11 when there is a large variation in the display. The largest measurement range is 30 Hz.

## **Common Specifications**

## **■ Event Input Ratings**

K3HB-R	S-TMR, HOLD, RESET, BANK1, BANK2, BANK4				
K3HB-P/-C	HOLD, RESET, BANK1, BANK2, BANK4				
Contact	ON: 1 k $\Omega$ max., OFF: 100 k $\Omega$ min.				
No-contact	ON residual voltage:	2 V max.			
	OFF leakage current: 0.1 mA max.				
	Load current: 4 mA max.				
	Maximum applied voltage	: 30 VDC max.			

## **■** Output Ratings

## **Contact Output**

Item	Resistive loads (250 VAC, cos  =1; 30 VDC, L/R=0 ms)	Inductive loads (250 VAC, closed circuit, cos∳=0.4; 30 VDC, L/R=7 ms)
Rated load	5 A at 250 VAC 5 A at 30 VDC	1 A at 250 VAC 1 A at 30 VDC
Rated through current	5 A	
Mechanical life expectancy	5,000,000 operations	
Electrical life expectancy	100,000 operations	

## **Transistor Outputs**

Maximum load voltage	24 VDC
Maximum load current	50 mA
Leakage current	100 μA max.

## **Linear Output**

Item	Outputs	0 to 20 mA	4 to 20 mA	0 to 5 V	1 to 5 V	0 to 10 V	
Allowable load impedance		500 $\Omega$ max.		5 kΩ min.			
Resolution		Approx. 10,000	)				
		±0.5% FS		±0.5% FS (±0.15 V for 1	V or less and no	output for 0 V)	

## **Serial Communications Output**

Item Type	RS-232C, RS-485
Communications method	Half duplex
Synchronization method	Start-stop synchronization (asynchronous)
Baud rate	9600/19200/38400 bps
Transmission code	ASCII
Data length	7 bits or 8 bits
Stop bit length	2 bits or 1 bit
Error detection	Vertical parity and FCS
Parity check	Odd, even

## BCD Output I/O Ratings (Input Signal Logic: Negative)

	I/O signal na	me		Item	Rating
Inputs	K3HB-R/P REQUEST	K3HB-C REQUEST COMPEN- SATION RESET	Input signal		No-voltage contact input
	HOLD MAX			urrent for age input	10 mA
	MIN RESET		Signal	ON voltage	1.5 V max.
	ITLOLI		level	OFF voltage	3 V min.
Outputs	DATA POLARITY OVER DATA VALID RUN		Maximum load voltage		24 VDC
			Maximum load current		10 mA
			Leakage current		100 μA max.
	K3HB-R/P HH	K3HB-C OUT1 OUT2 OUT3	Maximum load voltage		24 VDC
	H PASS		Maximum load current		50 mA
	L OUT4 LL OUT5		Leakage current		100 μA max.

Refer to the *K3HB Communications User's Manual* (Cat. No. N129) for details on serial and DeviceNet communications.


## **DeviceNet Communications**

Commun	nications protocol	Conforms to DeviceNe	Conforms to DeviceNet				
Supported	Remote I/O	Master-Slave connection (polling, bit-strobe, COS, cyclic)					
communications	communications	Conforms to DeviceNe	et communications sta	ındards.			
	I/O allocations	Allocate any I/O data	using the Configurator				
		Allocate any data, suc	h as DeviceNet-speci	fic parameters and var	iable area for Digital Indica	ators.	
		Input area: 2 blocks, 6	0 words max.				
		Output area: 1 block, 2 (The first word in the a		ed for the Output Execu	ution Enabled Flags.)		
	Message	Explicit message com	munications				
	communications	CompoWay/F communications commands can be executed (using explicit message communications)					
Connection meth	ods	Combination of multi-dr	op and T-branch conne	ctions (for trunk and dro	p lines)		
Baud rate		DeviceNet: 500, 250, or 125 Kbps (automatic follow-up)					
Communications	Communications media		Special 5-wire cable (2 signal lines, 2 power supply lines, 1 shield line)				
Communications	Communications distance		Network length (max.)	Drop line length (max.)	Total drop line length (max.)		
		500 Kbps	100 m max. (100 m max.)	6 m max.	39 m max.		
		250 Kbps	100 m max. (250 m max.)	6 m max.	78 m max.		
		125 Kbps	100 m max. (500 m max.)	6 m max.	156 m max.		
		The values in parentheses are for Thick Cable.					
Communications	power supply	24-VDC DeviceNet power supply					
Allowable voltage	e fluctuation range	11 to 25-VDC DeviceNet power supply					
Current consump	otion	50 mA max. (24 VDC)					
Maximum numbe	r of nodes	64 (DeviceNet Configurator is counted as one node when connected.)					
Maximum number of slaves		63					
Error control checks		CRC errors					
DeviceNet power supply		Supplied from DeviceNet communications connector					

## **Connections**

## ■ External Connection Diagrams


#### **Terminal Arrangements**

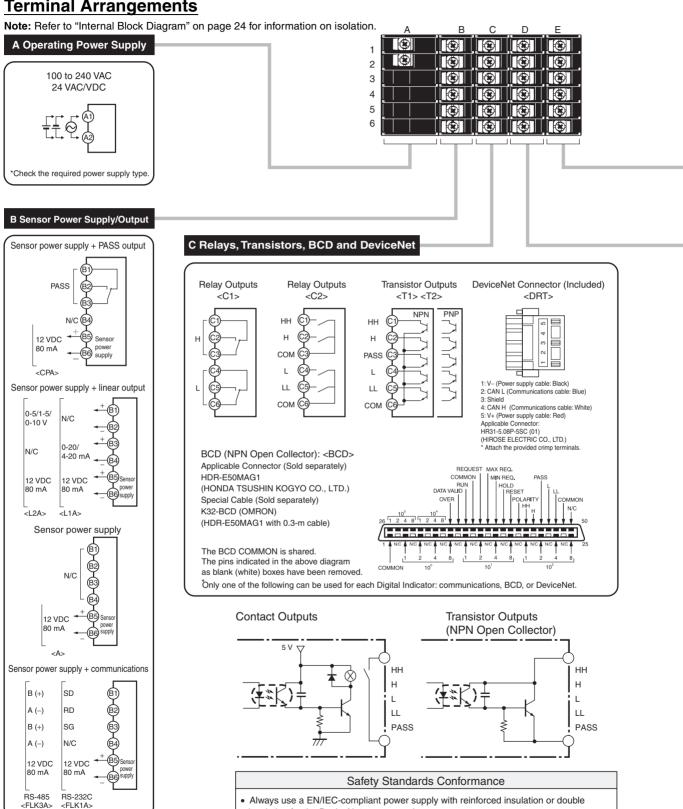


insulation for the DeviceNet power supply.

The product must be used indoors for the above applicable standards to apply.


<FLK3A>

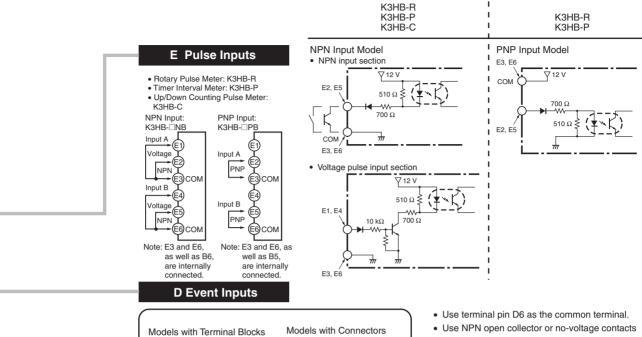

- Models with Terminal Blocks <1> <3> <2> <4> 2: S-TMR 4: RESET 1: N/C 1: N/C 3: HOLD 5: COMPENSATION (D) N/C 6: COM 0 S-TMR 9 8: BANK2 10 10: COM 7: BANK4 9: BANK1 €3 HOLD Applicable Connector (Sold separately) (A) RESET XG4M-1030 (OMRON) Special Cable (Sold separately)
  K32-DICN (OMRON) COMPENSATION **6** (XG4M-1030 with 3-m cable) 6 COM The following signals depend on the model: S-TMR: Used by the K3HB-R only. COMPENSATION: Used by the K3HB-C only
- for event input.

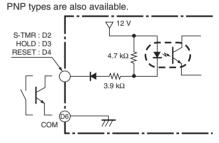

### **BCD Output Cable**

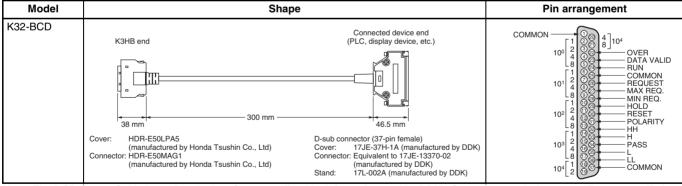


Note: The BCD Output Cable has a D-sub plug. Cover: 17JE-37H-1A (manufactured by DDK); Connector: equivalent to 17JE-23370-02 (D1) (manufactured by DDK)

## Special Cable (for Event Inputs with 8-pin Connector)

Model	Appearance	w	/iring
K32-DICN	9 10 2 3,000 mm_ Cable marking (3 m)	1 2 3 4 5 5 6 7 8	ignal name N/C S-TMR HOLD RESET N/C COM BANK4 BANK2 BANK1 COM


## ■ Derating Curve for Sensor Power Supply (Reference Values)

#### For 12V

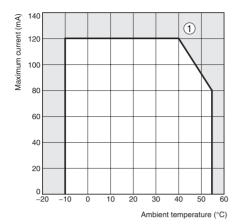

- **Note: 1.** The above values were obtained under test conditions with the standard mounting. The derating curve will vary with the mounting conditions, so be sure to adjust accordingly.
  - 2. Internal components may be deteriorated or damaged. Do not use the Digital Indicator outside of the derating range (i.e., do not use it in the area labeled (1), above).


## **■** Internal Block Diagram

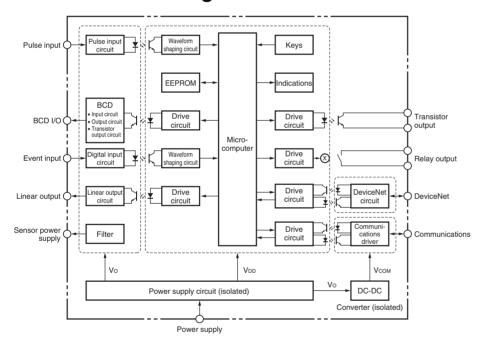

## **■** BCD Output Timing Chart


A REQUEST signal from a Programmable Controller or other external device is required to read BCD data.

#### **Single Sampling Data Output**

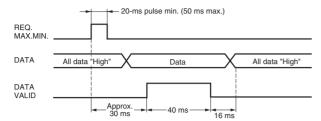

The data is set in approximately 30 ms from the rising edge of the REQUEST signal and the DATA VALID signal is output. When reading the data from a Programmable Controller, start reading the data when the DATA VALID signal turns ON. The DATA VALID signal will turn OFF 40 ms later, and the data will turn OFF 16 ms after that.


#### **Continuous Data Output**

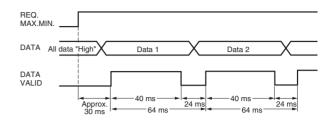


Measurement data is output every 64 ms while the REQUEST signal remains ON.

Note: If HOLD is executed when switching between data 1 and data 2, either data 1 or data 2 is output depending on the timing of the hold signal. The data will not go LOW.

• The K3HB BCD output model has an open collector output, so wired OR connection is possible

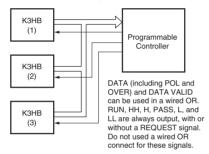


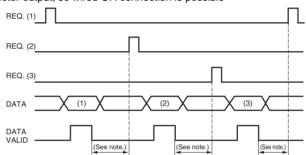

Note: Leave 20 ms min. between DATA VALID turning OFF and the REQUEST signal.

## **Programmable Controller Connection Example**

#### **Display Unit Connection Example**

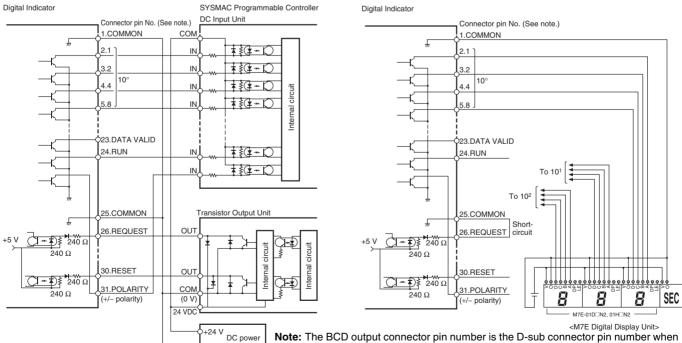


the BCD Output Cable (sold separately) is connected. This number differs from the pin number for the Digital Indicator narrow pitch connector (manufactured by Honda Tsushin Kogyo Co., Ltd.).


Refer to the following User's Manual for application precautions and other information required when using the Digital Indicator: K3HB-R/P/C Digital Indicator User's Manual (Cat. No. N136)

The manual can be downloaded from the following site in PDF format: OMRON Industrial Web http://www.fa.omron.co.jp

## **■** Component Names and Functions

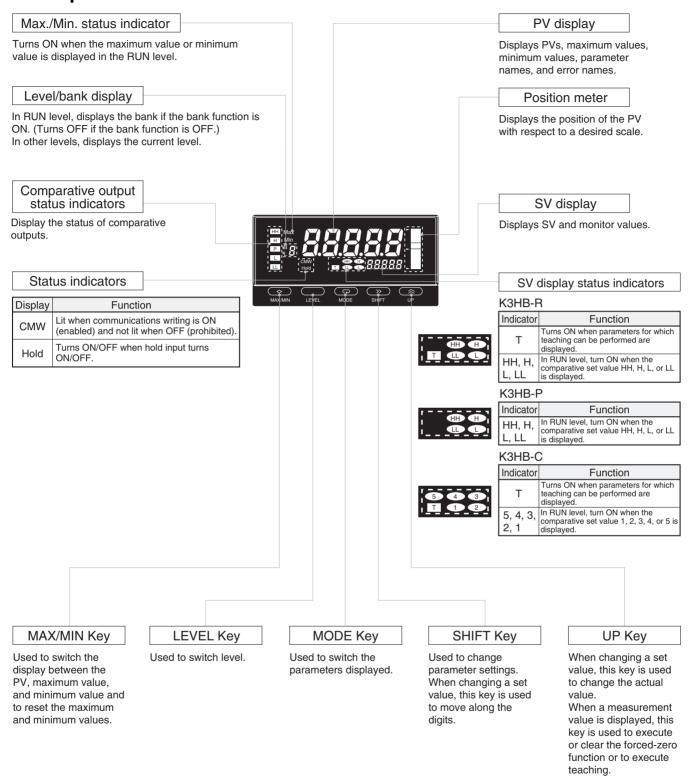

#### ■ Dimensions

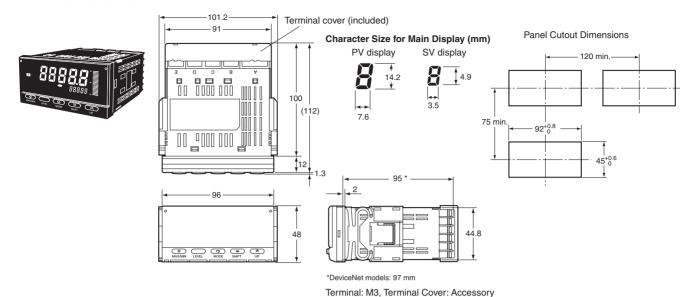


#### **Wiring Precautions**

- For terminal blocks, use the crimp terminals suitable for M3 screws.
- Tighten the terminal screws to the recommended tightening torque of approx. 0.5 N⋅m.
- To prevent inductive noise, separate the wiring for signal lines from that for power lines.

#### **Wiring**

• Use the crimp terminals suitable for M3 screws shown below.

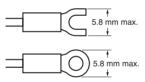

## **Unit Stickers (included)**


- No unit stickers are attached to the Digital Indicator.
- Select the appropriate units from the unit sticker sheets provided.




Note: For measurements for commercial purposes, be sure to use the unit required by any applicable laws or regulations.

#### **Mounting Method**

- 1. Insert the K3HB into the mounting cutout in the panel.
- Insert watertight packing around the Unit to make the mounting watertight.

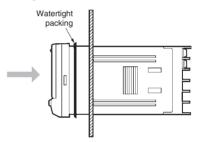


Insert the adapter into the grooves on the left and right sides of the rear case and push until it reaches the panel and is fixed in place.

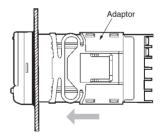

#### **LCD Field of Vision**

The K3HB is designed to have the best visibility at the angles shown in the following diagram.

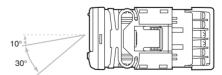

## **Waterproof Packing**

The waterproof packing ensures a level of waterproofing that conforms to NEMA 4X. Depending on the operating environment, deterioration, contraction, or hardening may occur and replacement may be necessary. In this case, consult your OMRON representative.

## **Main Functions**

#### ■ Main Functions and Features

#### Measurement

#### **Function** FUn[ RPC

The K3HB-R has the following six functions for receiving and displaying input pulses.

F1: Rotation (rpm)/circumferential speed

F2: Absolute ratio

F3: Error ratio

F4: Rotational difference

F5: Flow rate ratio

F6: Passing time

The K3HB-P has the following six functions for receiving and displaying input pulses.

F1: Passing speed

F2: Cycle

F3: Time difference

F4: Time band

F5: Measuring length

F6: Interval

The K3HB-C has the following three functions for receiving and displaying input pulses.

F1: Individual inputs

F2: Phase differential inputs

F3: Pulse counting input

#### **Filters**

## Average Processing Auti-L. Auti-n R

Average processing of input signals with extreme changes or noise smooths out the display and makes control stable.



Specify the types of sensor connected to input A and input B.

#### **Input Compensation**

#### **Auto-zero Times**

REIR, REIB R

The frequency is forced to zero if there is no pulse input for a set period.

#### **Input Compensation**

CăăPa. Căă-P C



The display can be changed to a preset compensation value using the compensation input.

#### **Key Operations**

#### **Teaching**



The present measurement value can be used as a scaling value.

#### **Key Protection**





Key protection restricts level or parameter changes using the keys to prevent unintentional key operations and malfunctions.

#### **Outputs**

#### Comparative Output Pattern 644-P R P C

Standard, zone, and level comparative output patterns can be selected for comparative outputs.

#### **Hysteresis**

HYS R

Prevents comparative outputs from chattering when the measurement value fluctuates slightly near the set value.

#### Output Refresh Stop 6-5kP R P

Holds the output status when a comparative result output other than PASS turns ON.

#### PASS Output Change PR55 R P



Comparative results other than PASS and error signals can be output from the PASS output terminal.

#### **Output OFF Delay**

öff-d R P C

Delays turning OFF comparatives for a set period. This can be used to provide sufficient time to read the comparative output ON status when the comparative result changes at short intervals.

#### **Shot Output**



SHOLE R P C

Turns ON the comparative output for a specific time.

#### **Output Logic**

åUt-n R P C





Reverses the output logic of comparative results.

#### Startup Compensation Timer 5-60 R



Measurements can be stopped for a set time using an external input.

#### Output Test



Output operation can be checked without using actual input signals by using the keys to set a test measurement value.

#### **Linear Outputs**

LSEEL, LSEEL, LSEEH, LSEEL



A current or voltage proportional to the change in the measurement value can be output.

#### **Standby Sequence**



The comparison outputs can be kept OFF until the measurement value enters the PASS range.

#### **Display**

#### Display Value Selection disp R P C



The display value can be set to the present value, the maximum value, or the minimum value.

#### **Display Color Selection**

Color RPC



The present value display color can be set to green or red. The color of the present value can also be switched according to the comparative output.

#### Display Refresh Period dref R P C



When the input changes rapidly, the display refresh period can be lengthened to control flickering and make the display easier to read.

#### **Position Meter**

PõS-Ł. PõS-H. PõS-L

The present measurement value can be displayed as a position in relation to the scaling width on a 20-gradation position meter.

#### **Prescale**

PS.R.J., PS.RY., PS.b.J., PS.b.Y

The input signal can be converted and displayed as any value.

#### Comparative Set Value Display 50.45P R P C





Select whether or not to display the comparative value during operation.

#### Display auto-return





Automatically returns the display to RUN level when there are no key operations (e.g., max./min. switching, bank settings using keys).

#### Other

#### Max./Min. Hold

Holds the maximum and minimum measurement values.

#### **Bank Selection**



bnY-[ RPC

Switch between 8 comparative value banks using the keys on the front panel or external inputs. A set of set comparative values can be selected as a group.

#### **Bank Copy**



Any bank settings can be copied to all banks.

#### Interruption Memory

ňEňa C

The measured value can be recorded when the power supply is interrupted.

#### User Calibration

The K3HB can be calibrated by the user.

## **Common Precautions**

#### ■ Precautions

#### / WARNING

Do not touch the terminals while power is being supplied. Doing so may possibly result in electric shock. Make sure that the terminal cover is installed before using the product.



Always provide protective circuits in the network. Without protective circuits, malfunctions may possibly result in accidents that cause serious injury or significant property damage. Provide double or triple safety measures in external control circuits, such as emergency stop circuits, interlock circuits, or limit circuits, to ensure safety in the system if an abnormality occurs due to malfunction of the product or another external factor affecting the product's operation.



#### **∕!\ CAUTION**

Do not allow pieces of metal, wire clippings, or fine metallic shavings or filings from installation to enter the product. Doing so may occasionally result in minor electric shock, fire, or malfunction.



Do not use the product in locations where flammable or explosive gases are present. Doing so may occasionally result in minor or moderate explosion, causing minor or moderate injury, or property damage.



Do not attempt to disassemble, repair, or modify the product. Doing so may occasionally result in minor or moderate injury due to electric shock.



Do not use the equipment for measurements within Measurement Categories II, III or IV (according to IEC61010-1). Doing so may occasionally cause unexpected operation, resulting in minor or moderate injury, or damage to the equipment. Use the equipment for measurements only within the Measurement Category for which the product is designed.



Perform correct setting of the product according to the application. Failure to do so may occasionally cause unexpected operation, resulting in minor or moderate injury, or damage to the equipment.



Ensure safety in the event of product failure by taking safety measures, such as installing a separate monitoring system. Product failure may occasionally prevent operation of comparative outputs, resulting in damage to the connected facilities and equipment.



Tighten the screws on the terminal block and the connector locking screws securely using a tightening torque within the following ranges. Loose screws may occasionally cause fire, resulting in minor or moderate injury, or damage to the equipment.



Terminal block screws: 0.43 to 0.58 N⋅m Connector locking screws: 0.18 to 0.22 N⋅m

Make sure that the product will not be adversely affected if the DeviceNet cycle time is lengthened as a result of changing the program with online editing. Extending the cycle time may cause unexpected operation, occasionally resulting in minor or moderate injury, or damage to the equipment.



Before transferring programs to other nodes or changing I/O memory of other nodes, check the nodes to confirm safety. Changing the program or I/O memory of other nodes may occasionally cause unexpected operation, resulting in minor or moderate injury, or damage to the equipment.




#### **Precautions for Safe Use**

- 1. Do not use the product in the following locations.
  - Locations subject to direct radiant heat from heating equipment
  - Locations where the product may come into contact with water or oil
  - · Locations subject to direct sunlight
  - Locations where dust or corrosive gases (in particular, sulfuric or ammonia gas) are present
  - · Locations subject to extreme temperature changes
  - · Locations where icing or condensation may occur
  - · Locations subject to excessive shocks or vibration
- 2. Do not use the product in locations subject to temperatures or humidity levels outside the specified ranges or in locations prone to condensation. If the product is installed in a panel, ensure that the temperature around the product (not the temperature around the panel) does not go outside the specified range.
- 3. Provide sufficient space around the product for heat dissipation.
- 4. Use and store the product within the specified temperature and humidity ranges. If several products are mounted side-by-side or arranged in a vertical line, the heat dissipation will cause the internal temperature of the products to rise, shortening the service life. If necessary, cool the products using a fan or other cooling method.
- 5. The service life of the output relays depends on the switching capacity and switching conditions. Consider the actual application conditions and use the product within the rated load and electrical service life. Using the product beyond its service life may result in contact welding or burning.
- 6. Install the product horizontally.
- 7. Mount to a panel between 1 and 8-mm thick.
- 8. Use the specified size of crimp terminals (M3, width: 5.8 mm max.) for wiring. To connect bare wires, AWG22 (cross section: 0.326 mm²) to AWG14 (cross section: 2.081 mm²) to wire the power supply terminals and AWG28 (cross section: 0.081 mm²) to AWG16 (cross section: 1.309 mm²) for other terminals. (Length of exposed wire: 6 to 8 mm)
- 9. In order to prevent inductive noise, wire the lines connected to the product separately from power lines carrying high voltages or currents. Do not wire in parallel with or in the same cable as power lines. Other measures for reducing noise include running lines along separate ducts and using shield lines.
- **10.**Ensure that the rated voltage is achieved no longer than 2 s after turning the power ON.
- **11.** Allow the product to operate without load for at least 15 minutes after the power is turned ON.
- 12.Do not install the product near devices generating strong high-frequency waves or surges. When using a noise filter, check the voltage and current and install it as close to the product as possible.
- 13.Do not use thinner to clean the product. Use commercially available alcohol.
- **14.**Be sure to confirm the name and polarity for each terminal before wiring the terminal block and connectors.
- 15. Use the product within the noted supply voltage and rated load.
- 16.Do not connect anything to unused terminals.
- 17.Output turns OFF when the mode is changed or settings are initialized. Take this into consideration when setting up the control system.
- 18.Install an external switch or circuit breaker that complies with applicable IEC60947-1 and IEC60947-3 requirements and label them clearly so that the operator can quickly turn OFF the power.
- 19.Use the specified cables for the communications lines and stay within the specified DeviceNet communications distances. Refer to the User's Manual (Cat. No. N129) for details on communications distance specifications and cables.

- **20.**Do not pull the DeviceNet communications cables with excessive force or bend them past their natural bending radius.
- 21.Do not connect or remove connectors while the DeviceNet power is being supplied. Doing so will cause product failure or malfunction.
- 22.Use cables with heat resistance of 70°C min.


#### ■ Noise Countermeasures

- Do not install the product near devices generating strong highfrequency waves or surges, such as high-frequency welding and sewing machines.
- Mount a surge suppressor or noise filter to peripheral devices generating noise, in particular, motors, transformers, solenoids, and magnet coils.

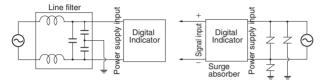

3. In order to prevent inductive noise, wire the lines connected to the terminal block separately from power lines carrying high voltages or currents. Do not wire in parallel with or in the same cable as power lines. Other measures for reducing noise include running lines along separate ducts and using shield lines.

## **Example of Countermeasures for Inductive Noise on Input Lines**

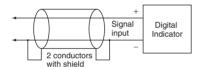

- 4. If a noise filter is used for the power supply, check the voltage and current, and install the noise filter as close to the product as possible.
- 5. Reception interference may occur if the product is used close to a radio, television, or wireless.

## **Warranty and Limitations of Liability**

#### **■ WARRANTY**

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES. EXPRESS OR IMPLIED.

#### **■ LIMITATIONS OF LIABILITY**

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE. OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

## **Application Considerations**

#### **■ SUITABILITY FOR USE**

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products.

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Cat. No. N135-E1-02 In the interest of product improvement, specifications are subject to change without notice.

## **OMRON Corporation**

**Industrial Automation Company** 

Industrial Devices and Components Division H.Q. Measuring Components Department Shiokoji Horikawa, Shimogyo-ku, Kyoto, 600-8530 Japan Tel: (81)75-344-7080/Fax: (81)75-344-7189